



Ecophon Edge with Focus E

600x600, 1200x600, 1200x1200, XL,
and Master E 600x600, 1200x1200


M165

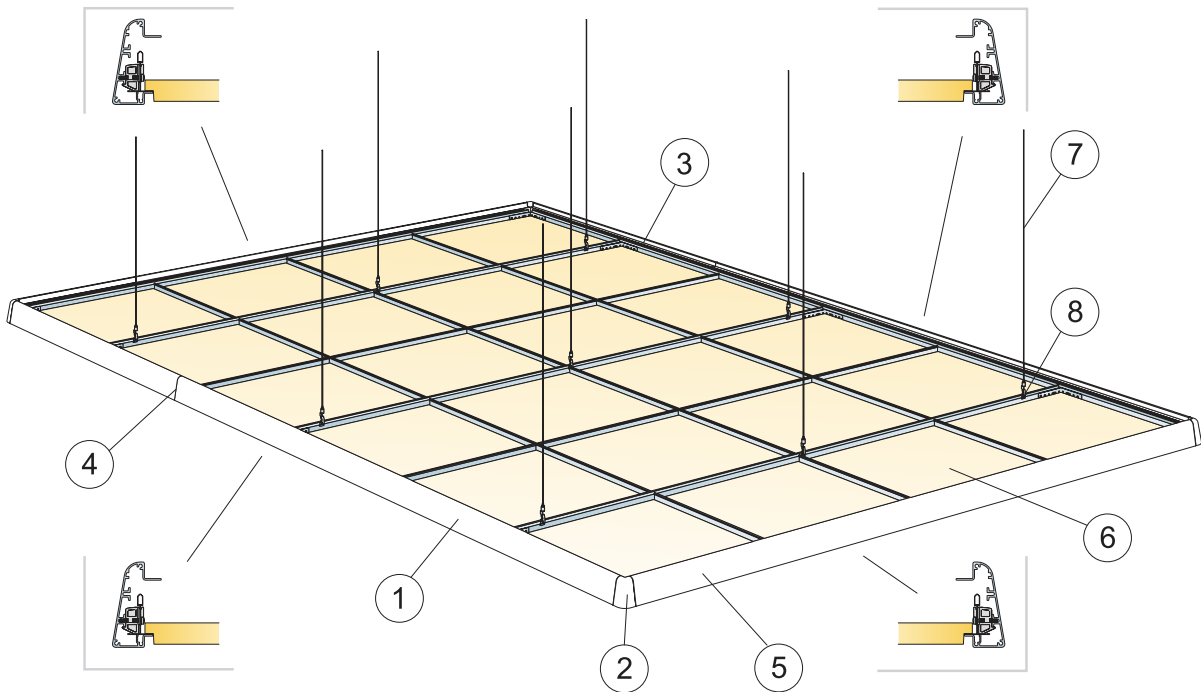


1. Connect Edge profile

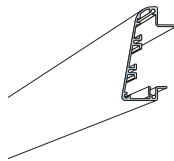


2. Connect Edge corner




3. Connect L-coupling 1040




4. Joint with Guide pins and Joint fixing bracket

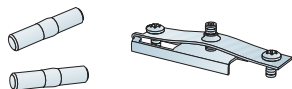

5. Connect Edge profile clip E



6. Focus E tile and Connect grid

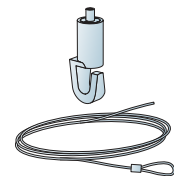

7. Connect Adj. wire hanger 2174




8. Connect Hanger clip 1286






Connect Edge profile

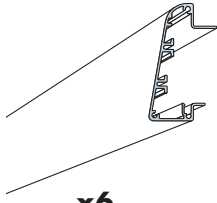

x6




Connect Edge corner




x4



Connect Edge kit E



x18



x4



x1



x24



x12



x1

T10









x1

Ecophon



SAINT-GOBAIN

www.ecophon.com

1

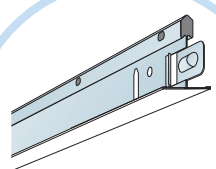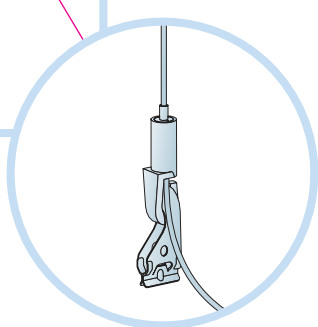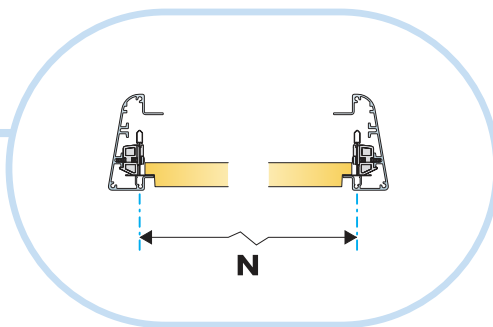
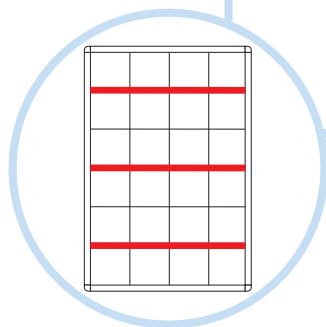
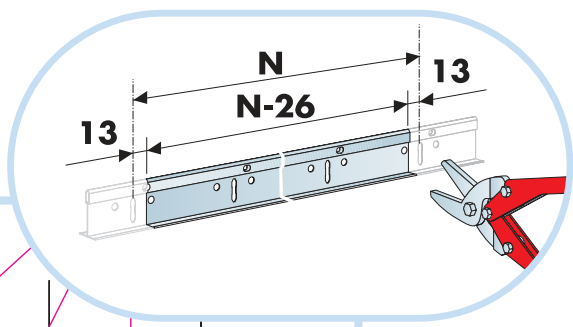
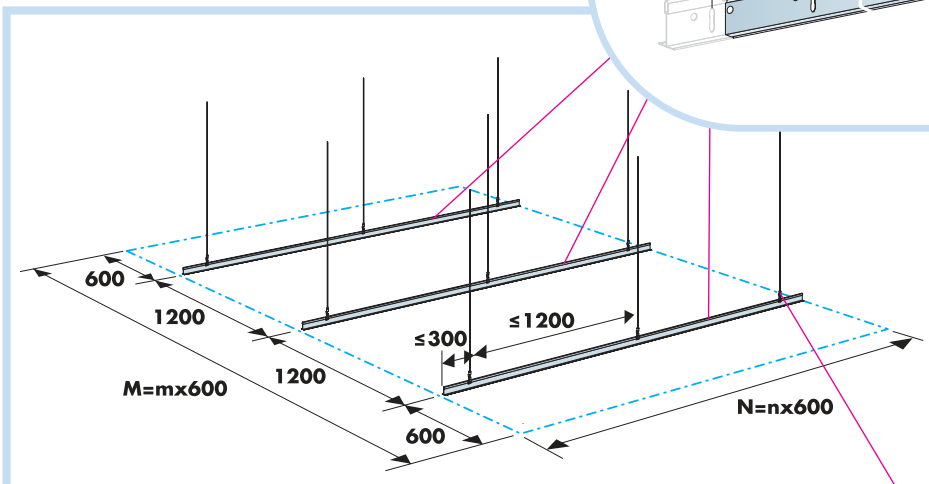




Connect Main runner
HD 7101

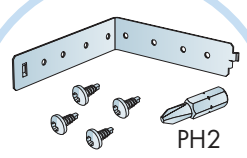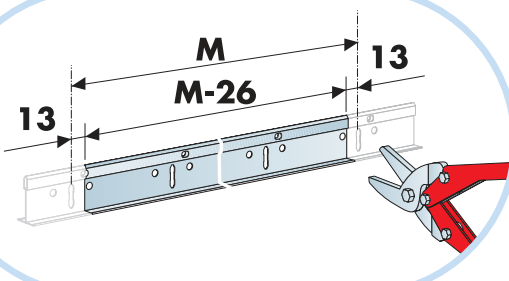






Connect Installation-screw
Br 4025

2

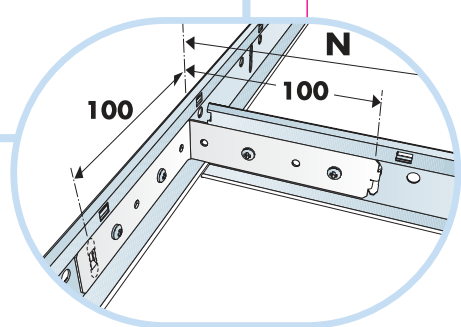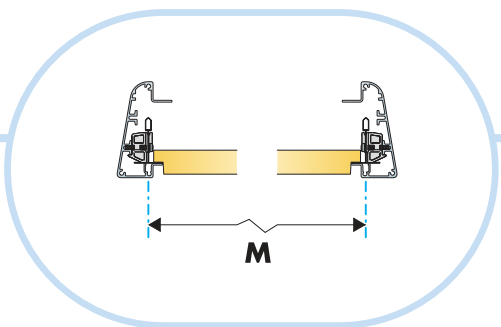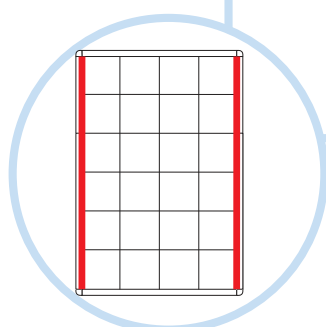
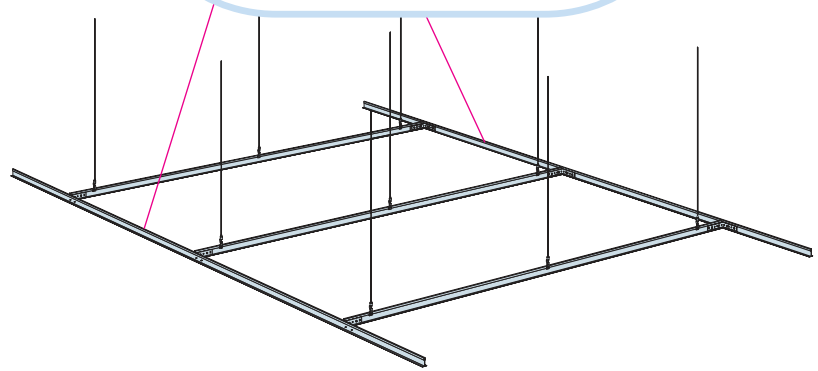


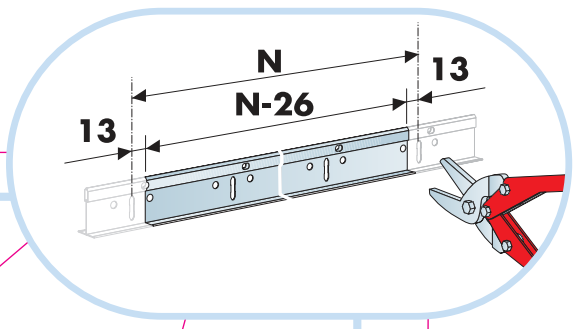
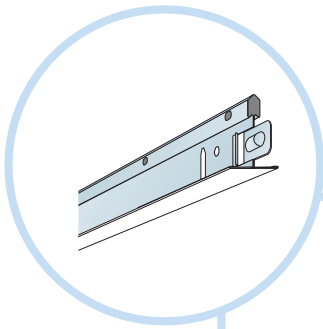


3

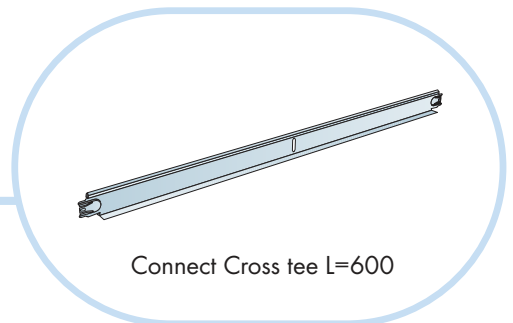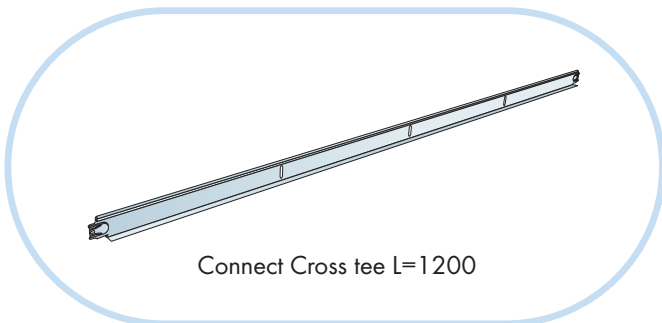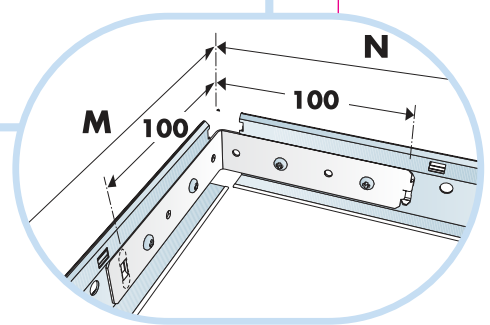
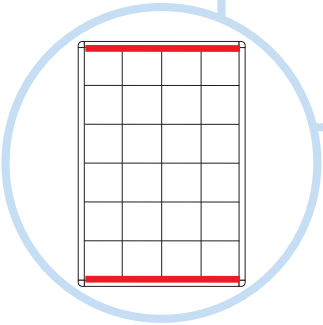
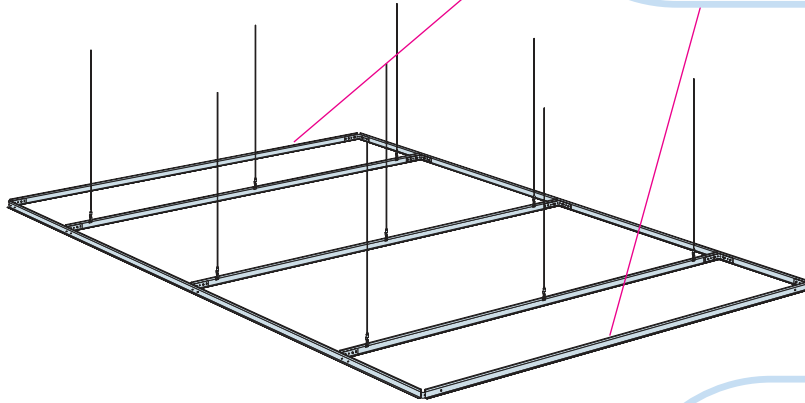


4



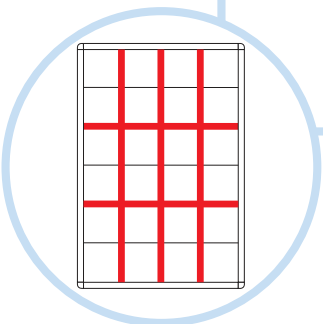
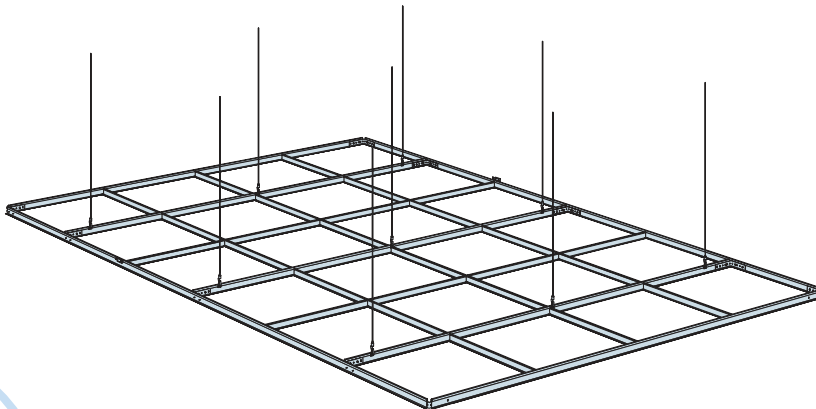


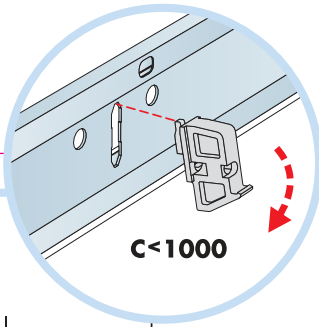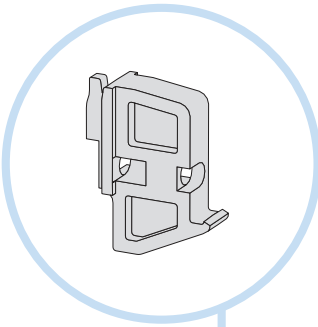

5

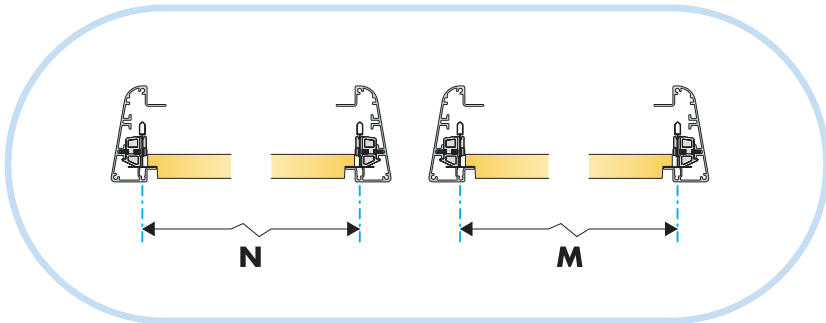
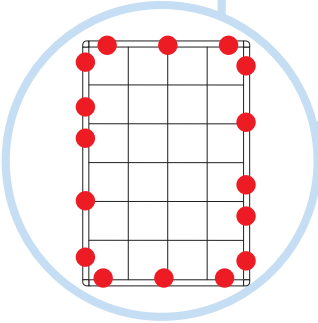
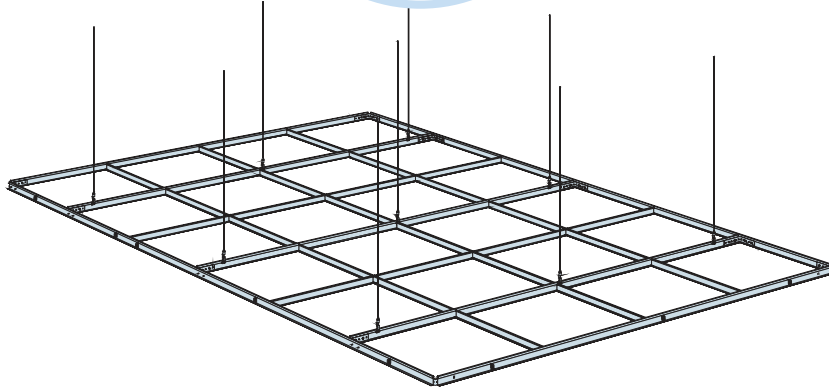


6

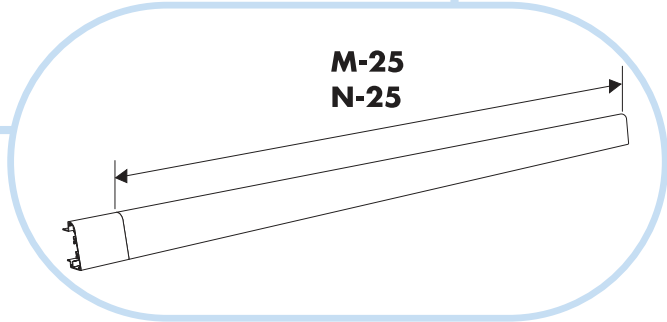
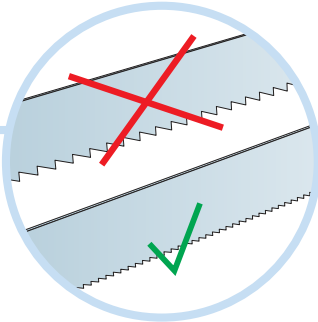
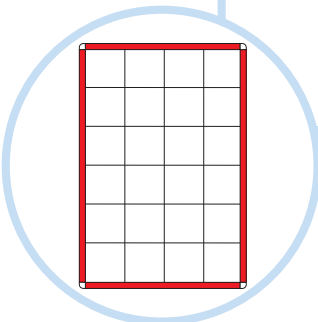
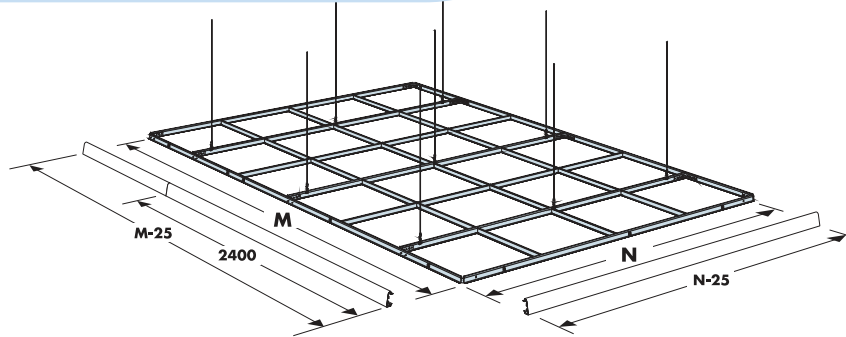


M > 2400 → 7





M ≤ 2400 → 8

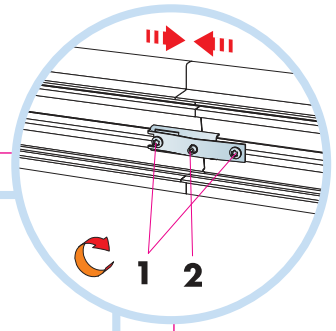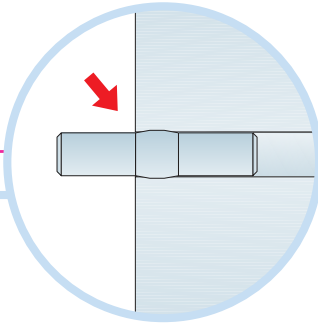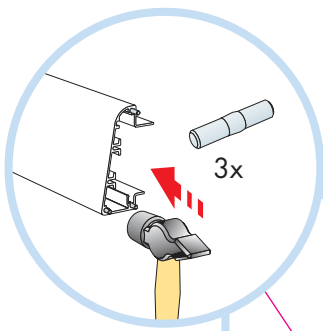


7

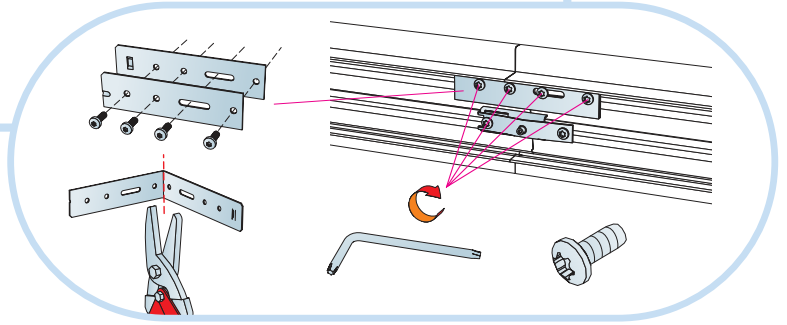
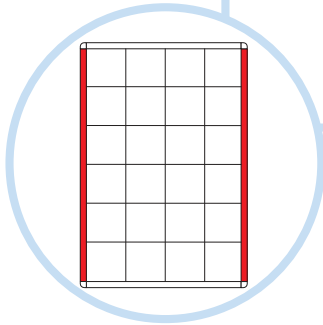
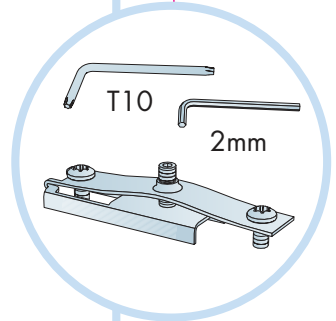
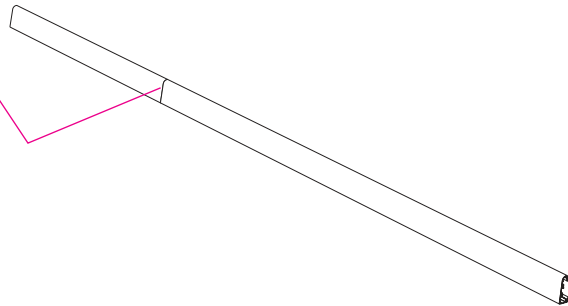


8

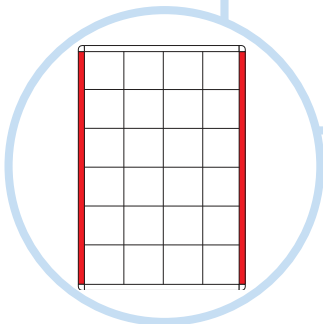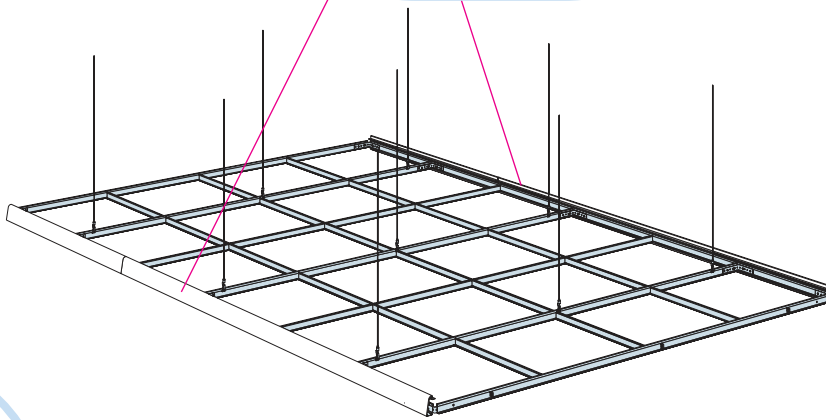
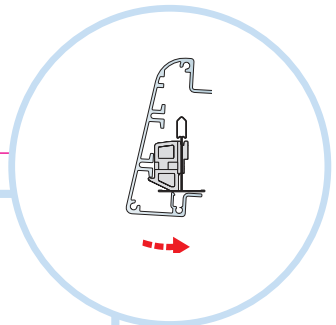
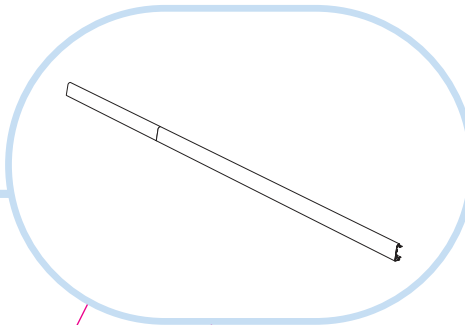




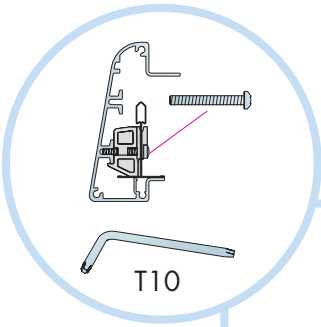


9

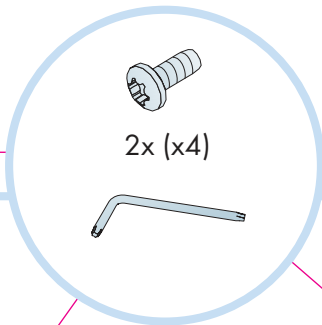
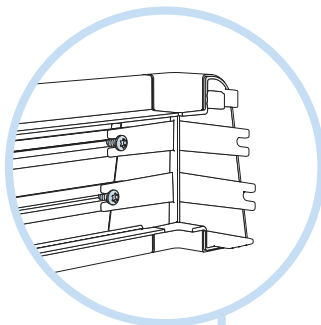
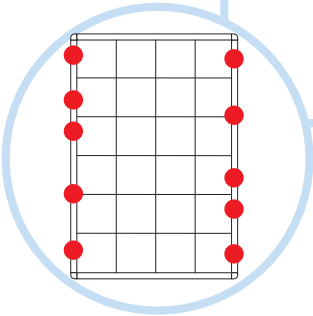
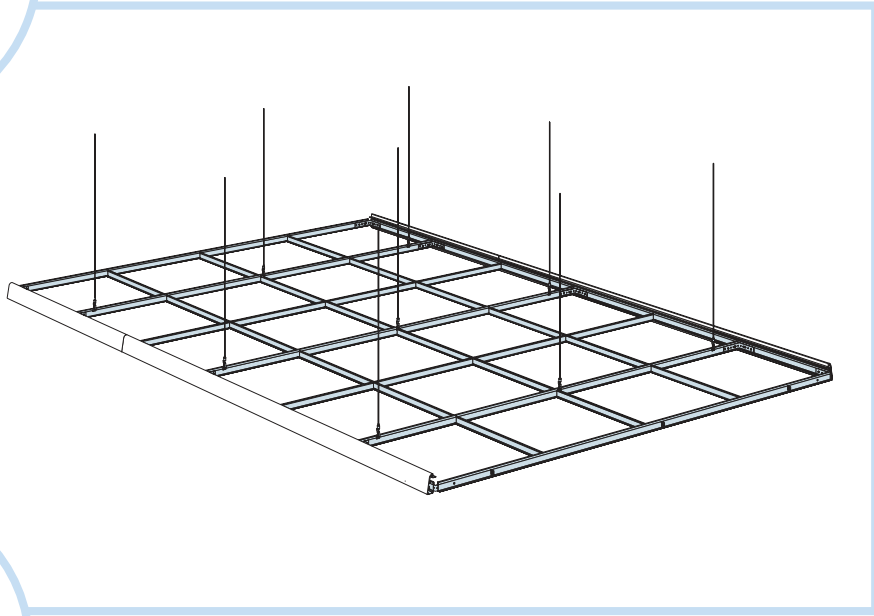


10

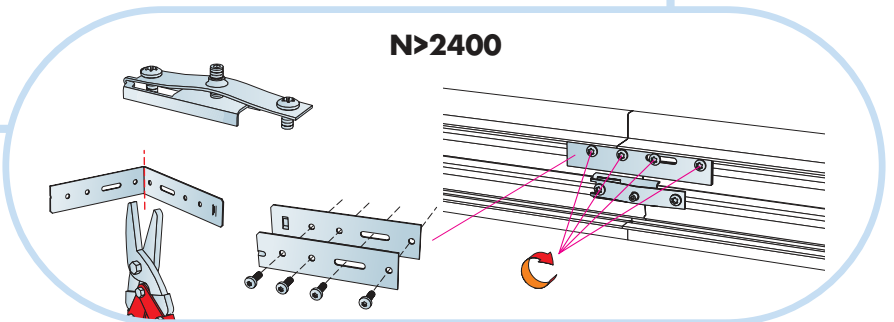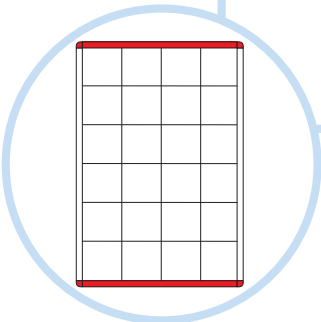
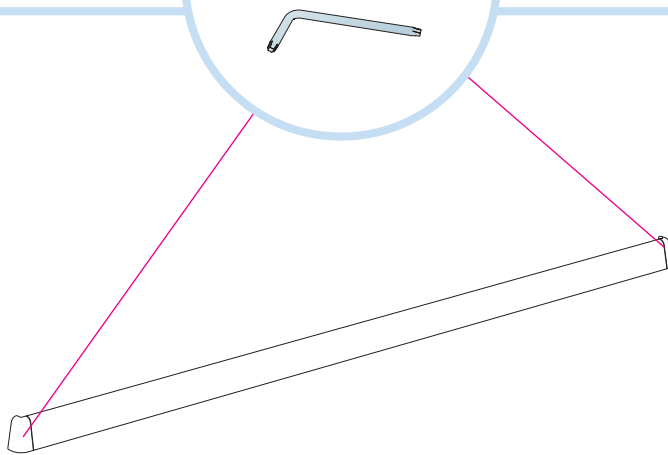


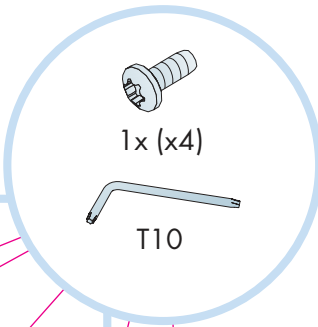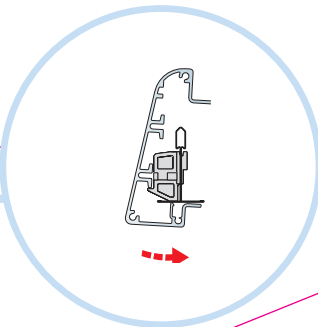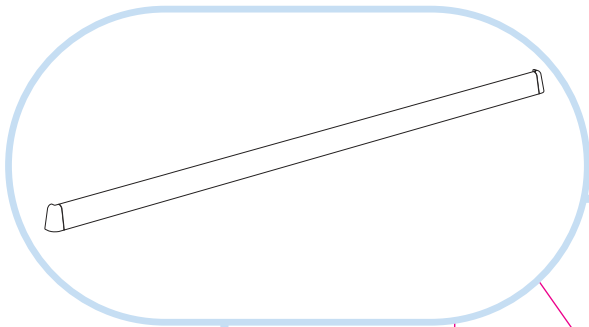


11

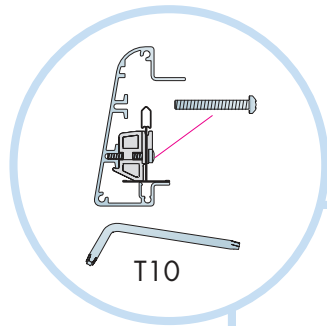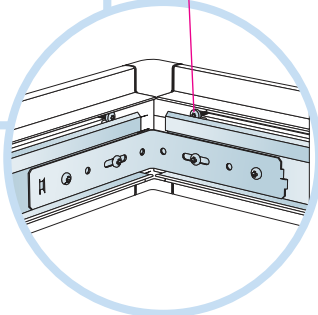
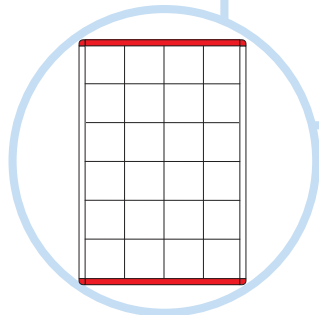
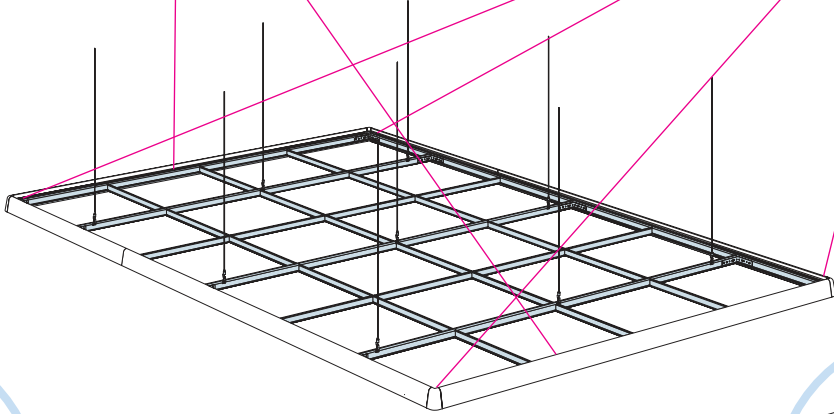


12

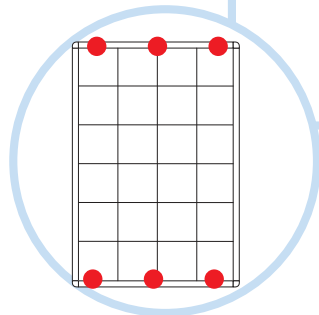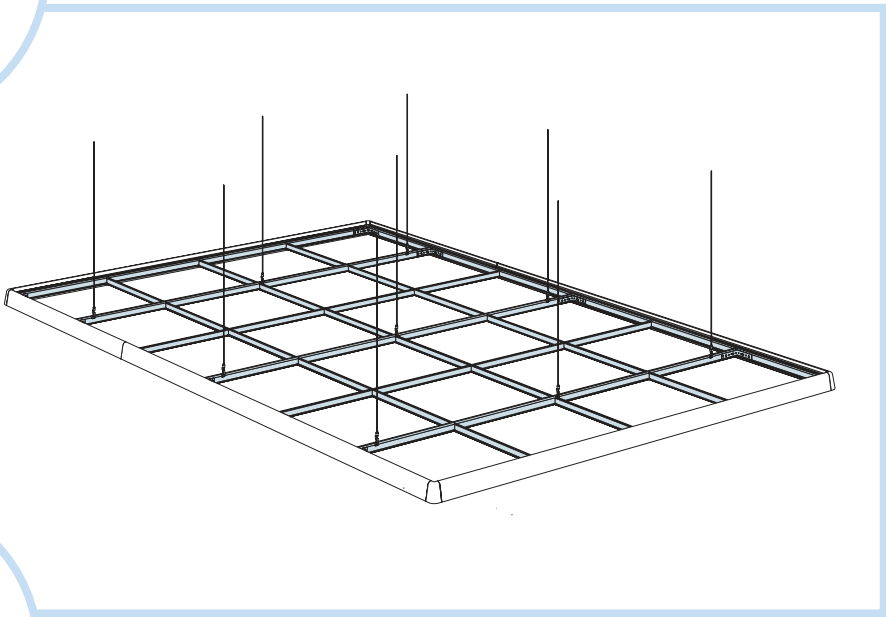

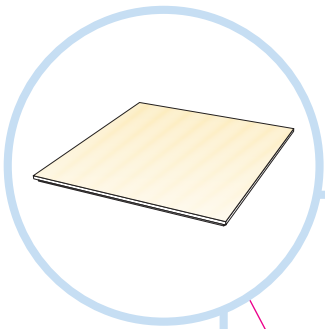

13

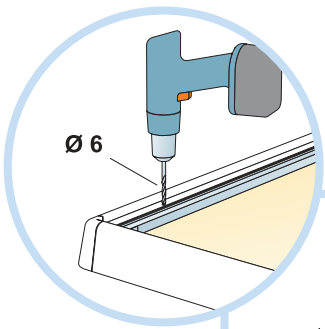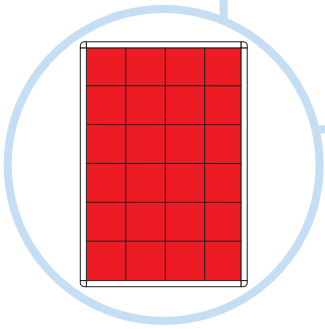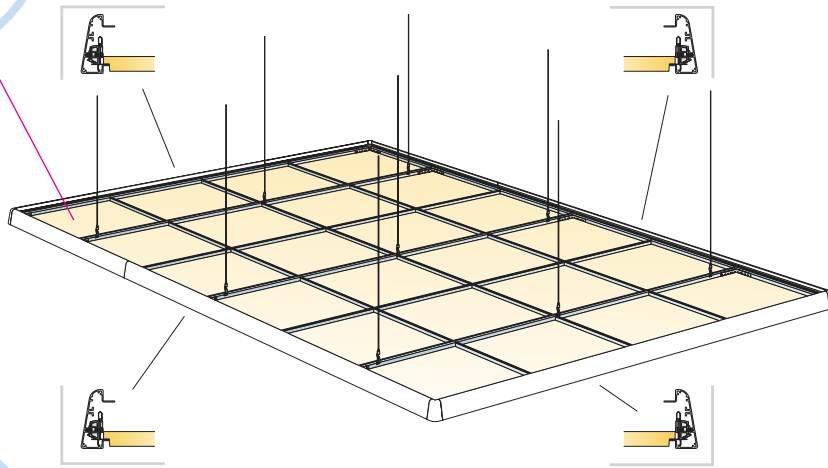

14

1200x1200

