


## Hygiene Advance A C4

600x600, 1200x600 (20 and 40 mm)

M246

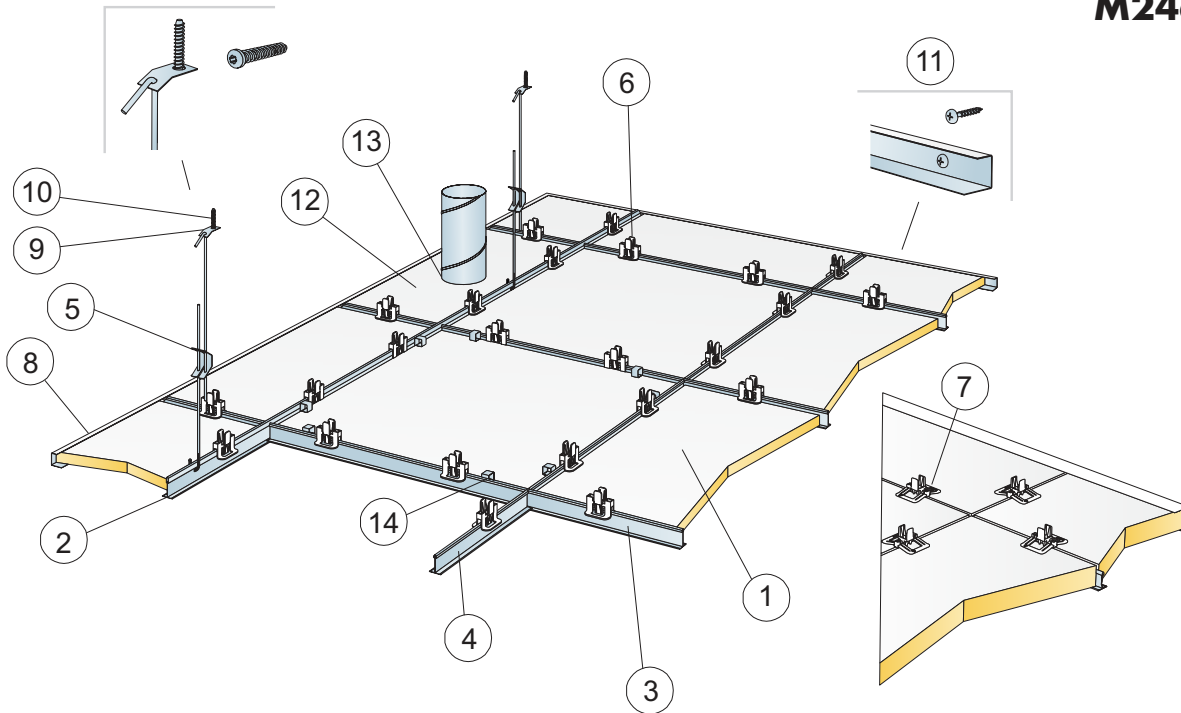

1. Ecophon Hygiene Advance A

2. Connect T24 Main runner C4

3. Connect T24 Cross tee C4, L=1200

4. Connect T24 Cross tee C4, L=600

5. Connect Adjustable hanger C4

6. Connect Hygiene Clips 20 C4

7. Connect Hygiene clip 40 C4

8. Connect Channel trim C4

9. Connect Fixing plate C4

10. Connect Anchor screw C4














11. Connect Installation screw C4





12. Hygiene Advance technical tile (thickness 20 mm)

13. Joint sealant  
(not supplied by Ecophon)

14. Connect Demo clip 20 C4

15. Connect Hygiene Tape Hygiene Advance

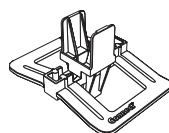
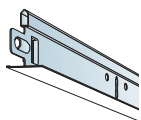


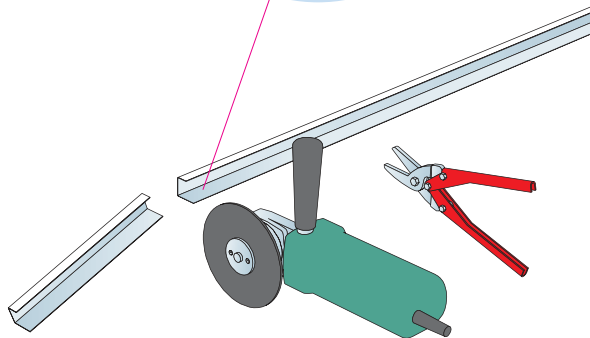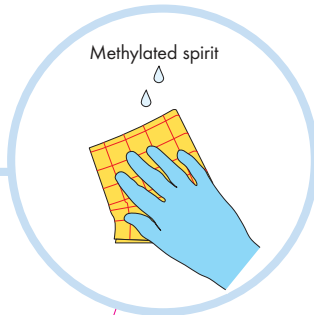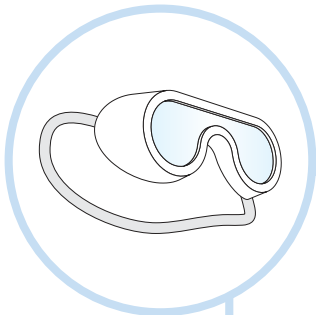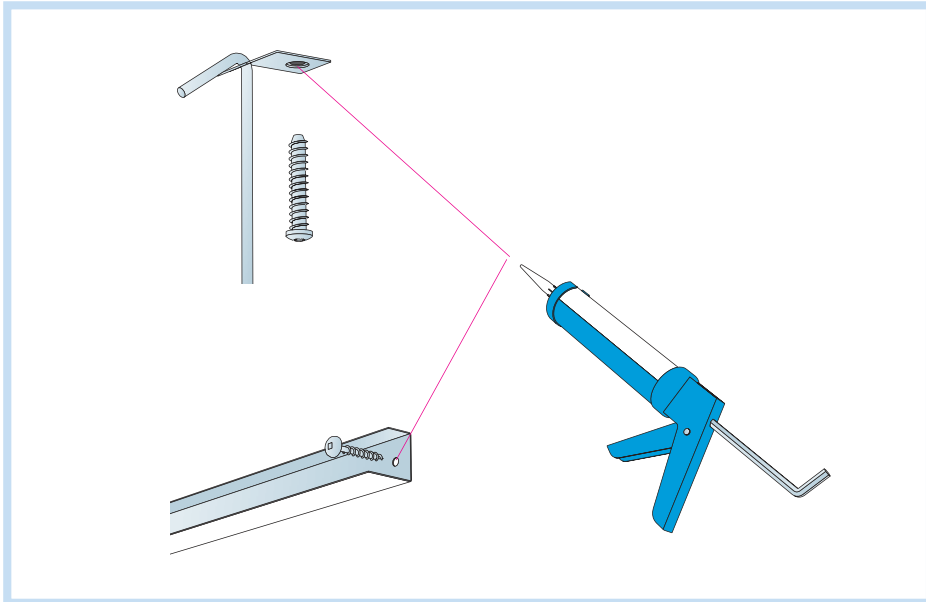

**Ecophon**

SAINT-GOBAIN

[www.ecophon.com](http://www.ecophon.com)

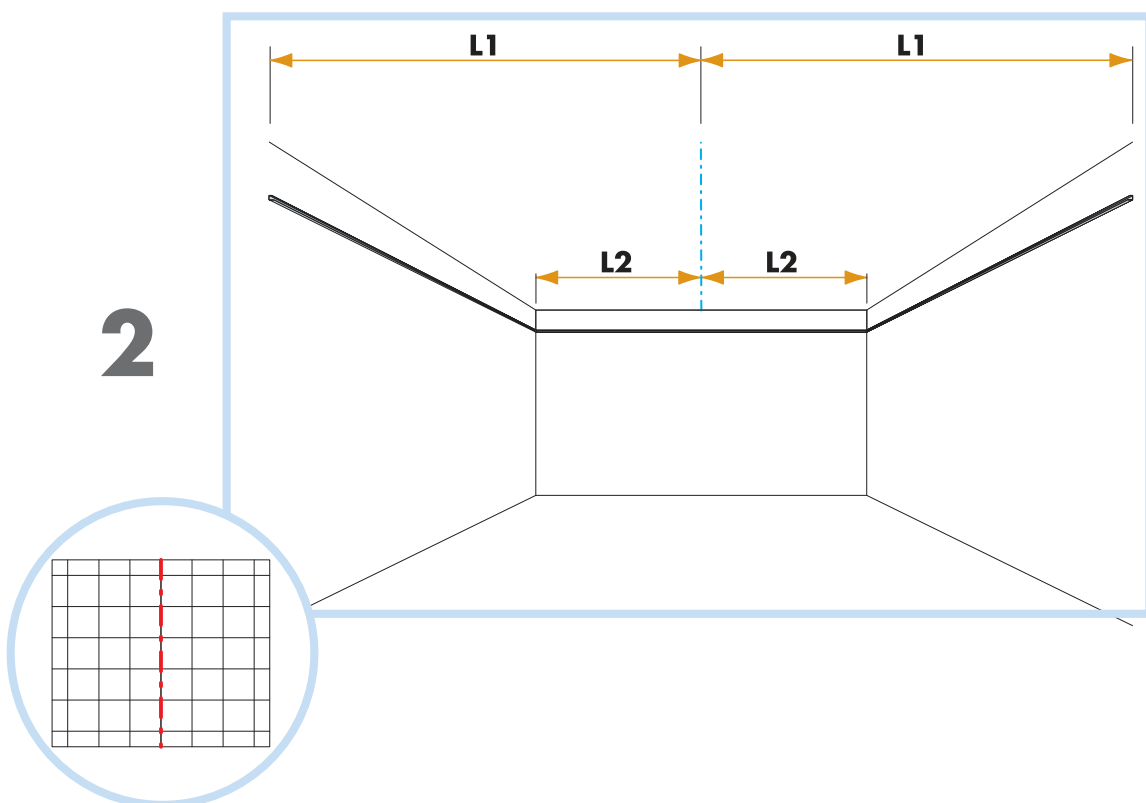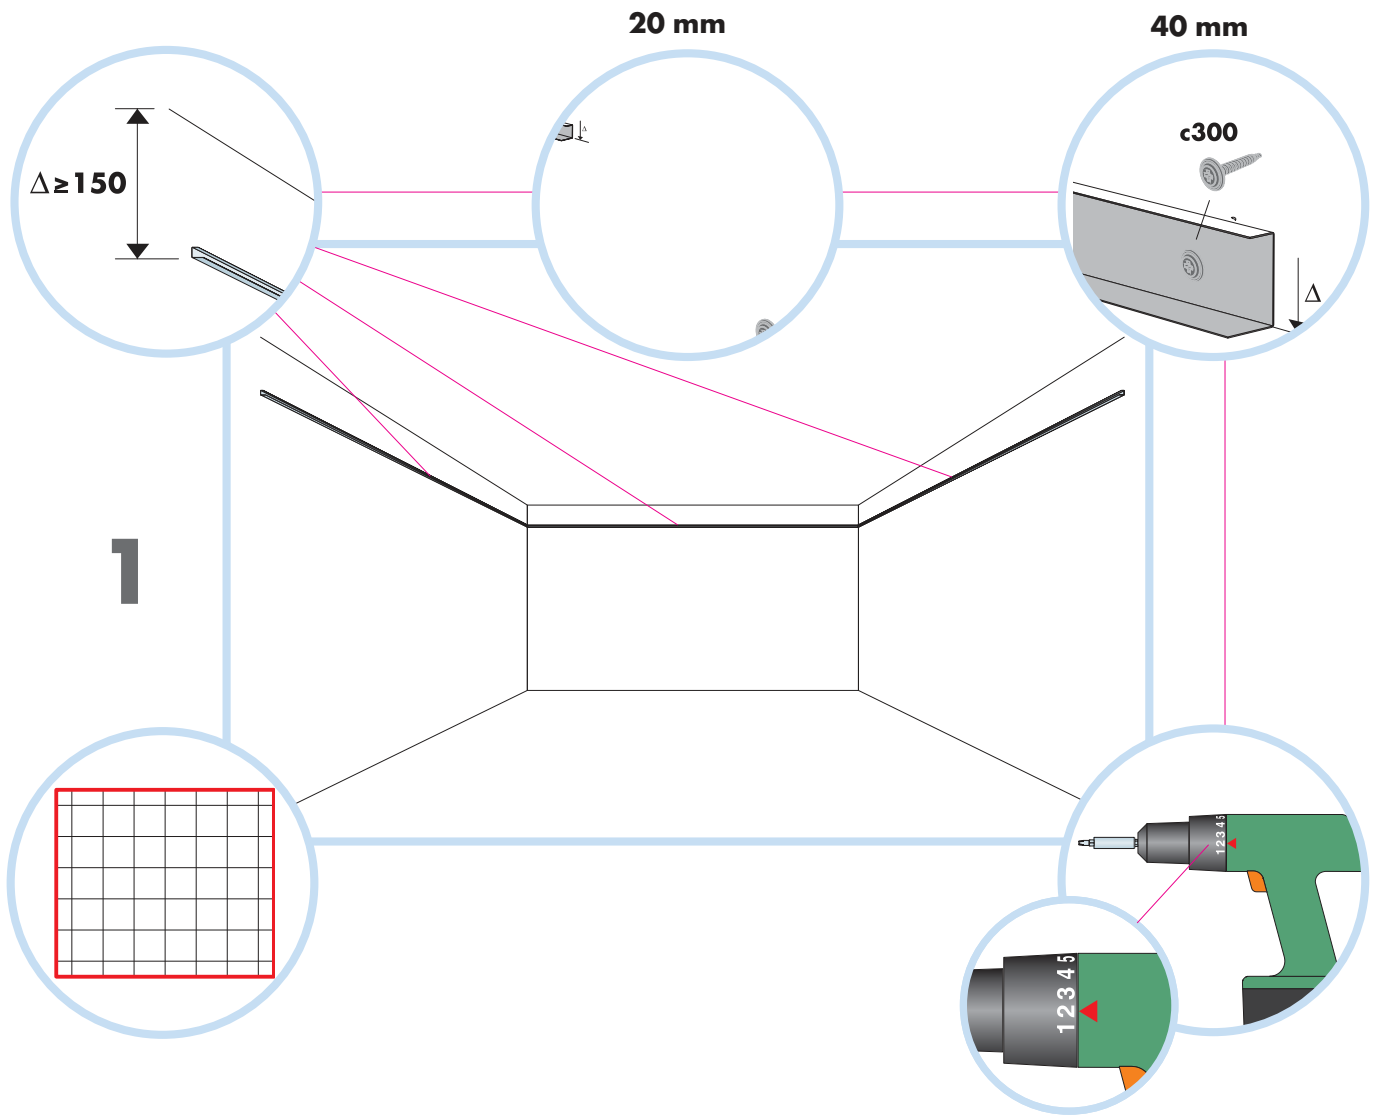

600

x

x

3

$x \geq 300$

4

$x < 300$



3<sup>1</sup>


300-600

600




300-600



3<sup>1</sup>

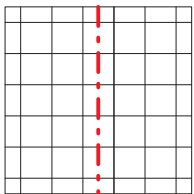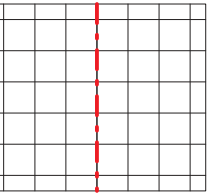

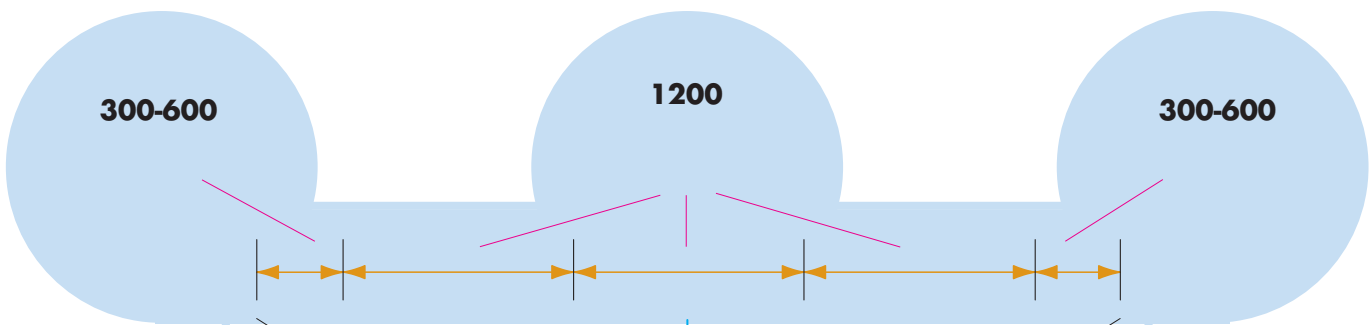







4

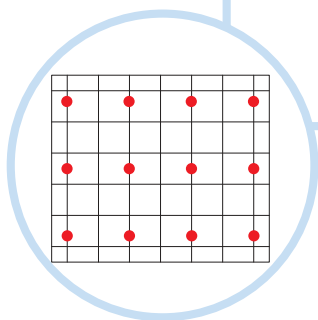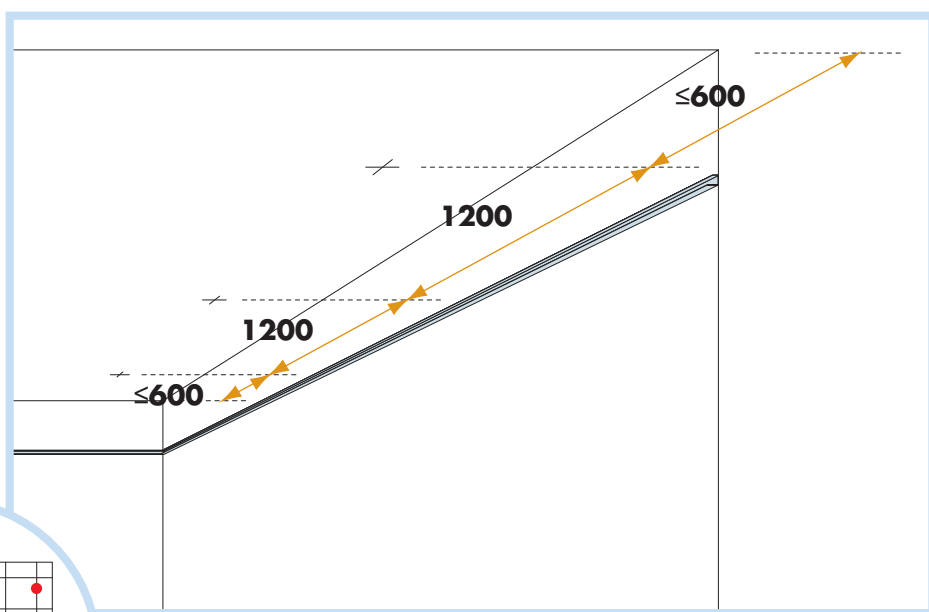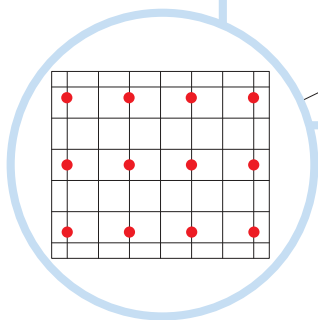


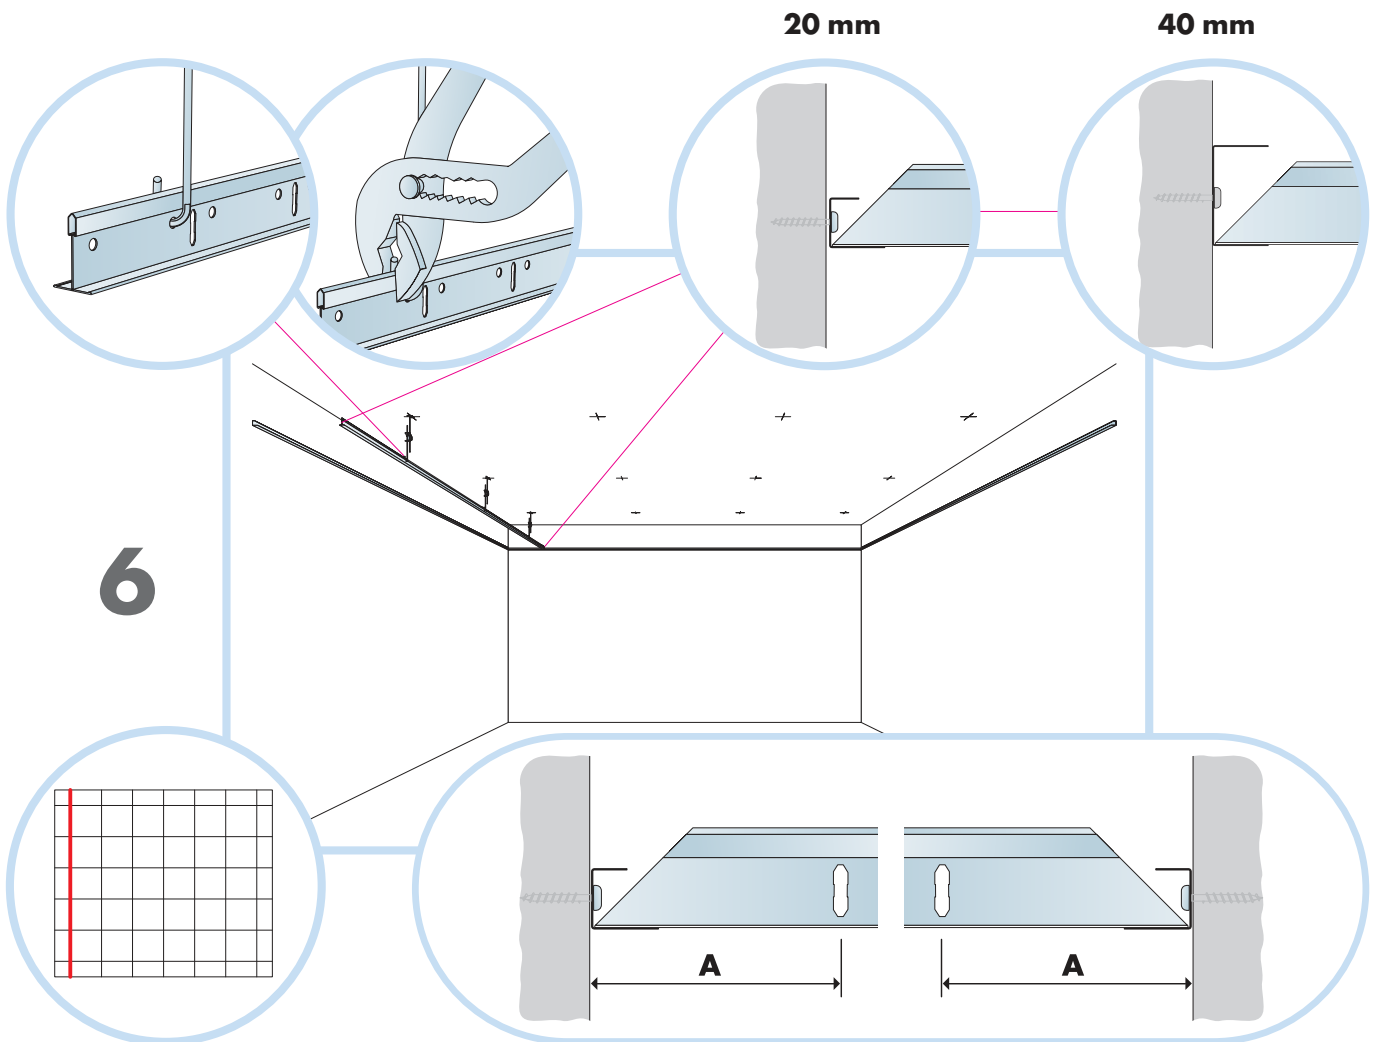
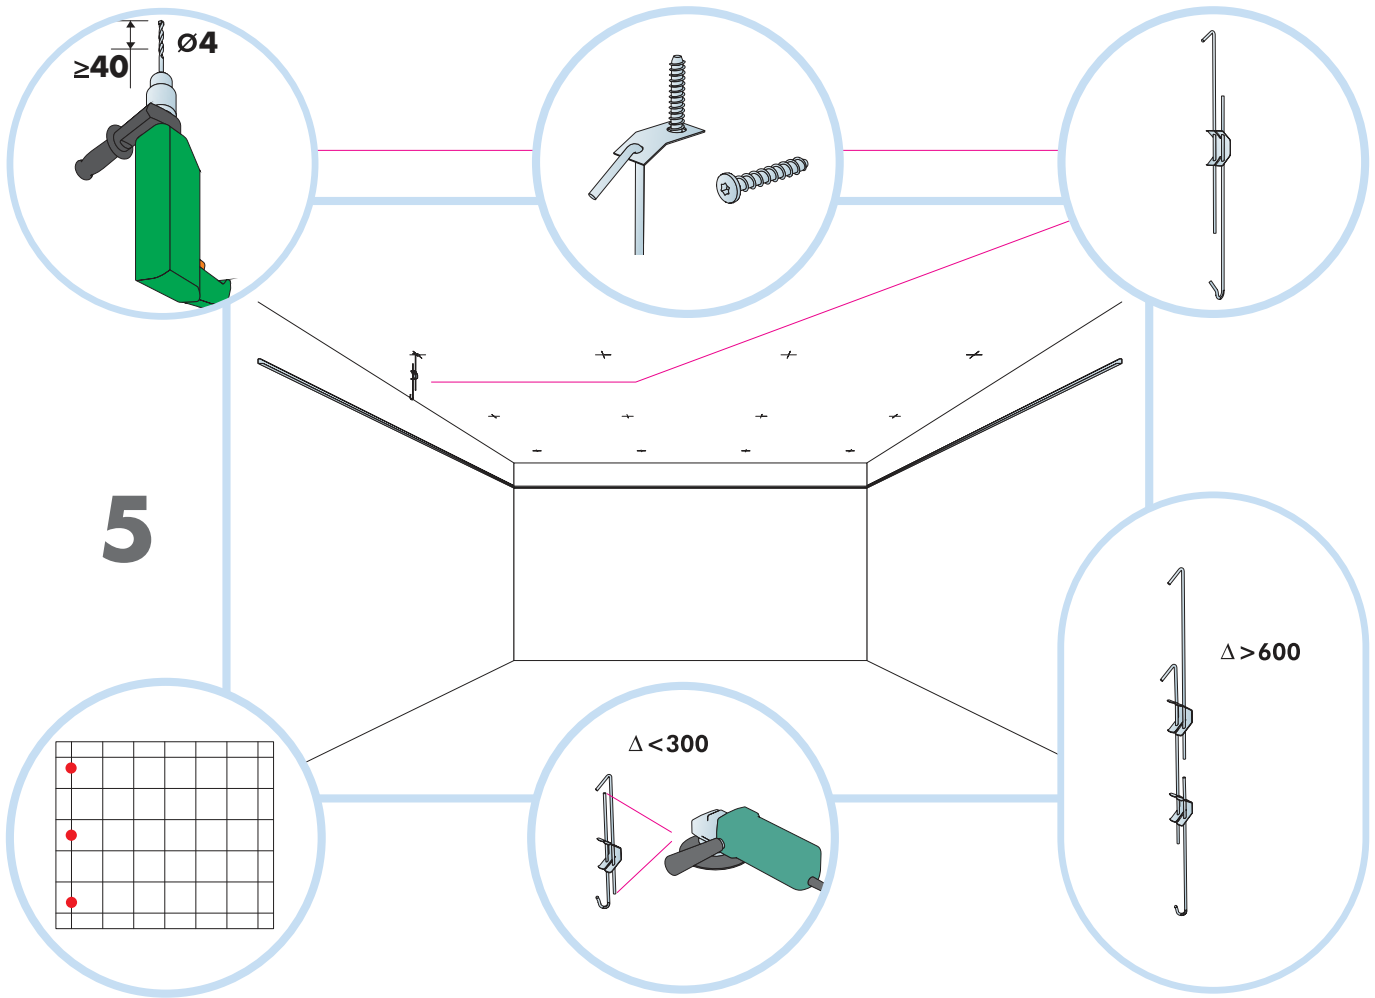


7



Connect Spring clamp

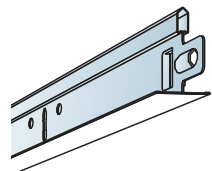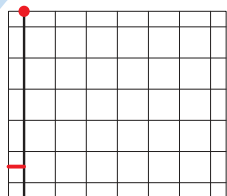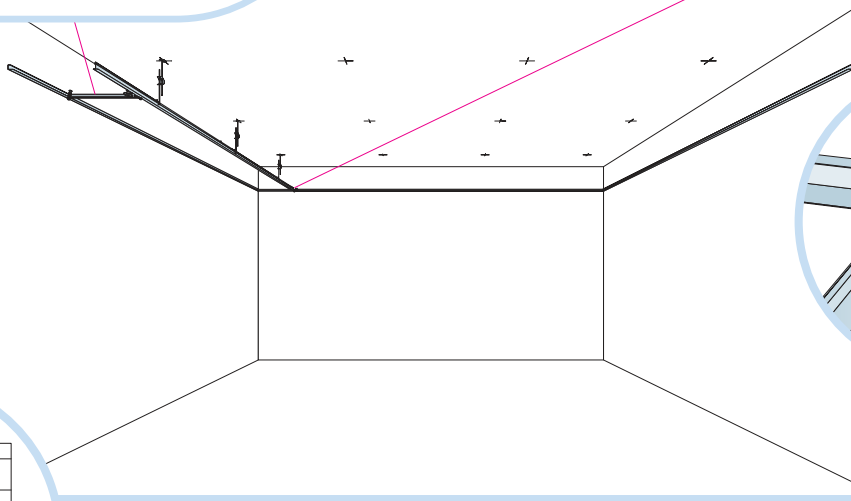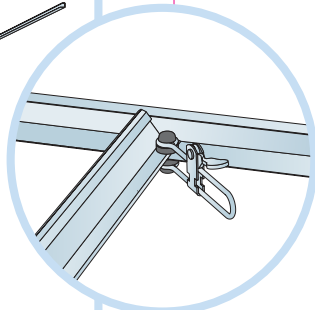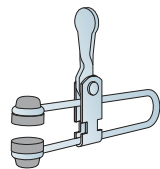
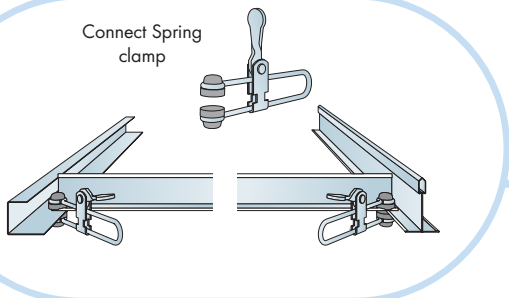




Connect Laser angle

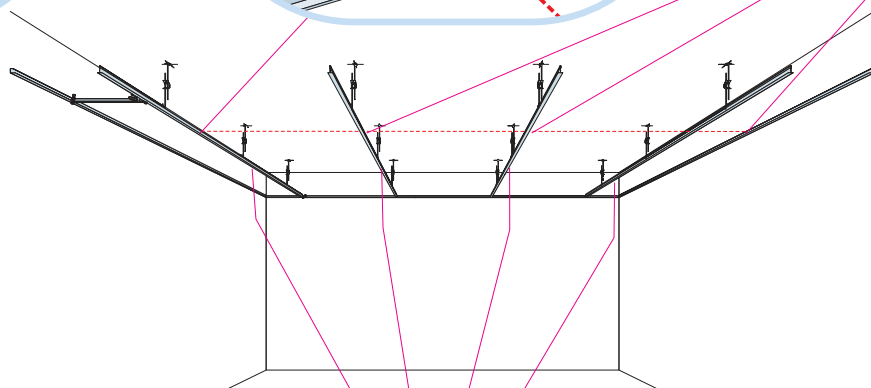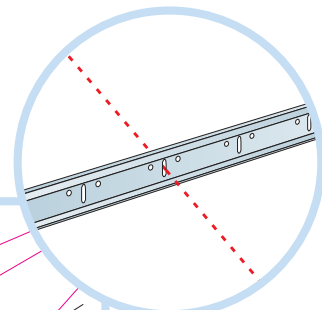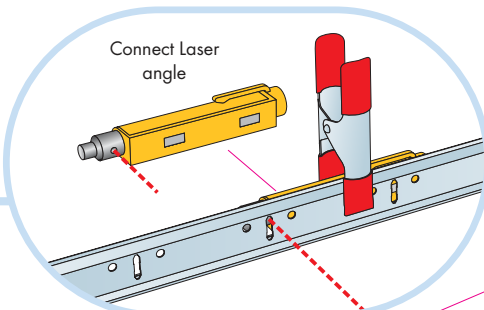





8

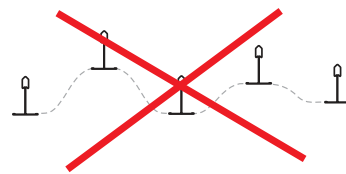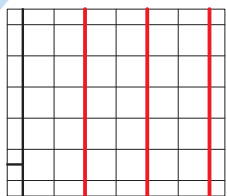


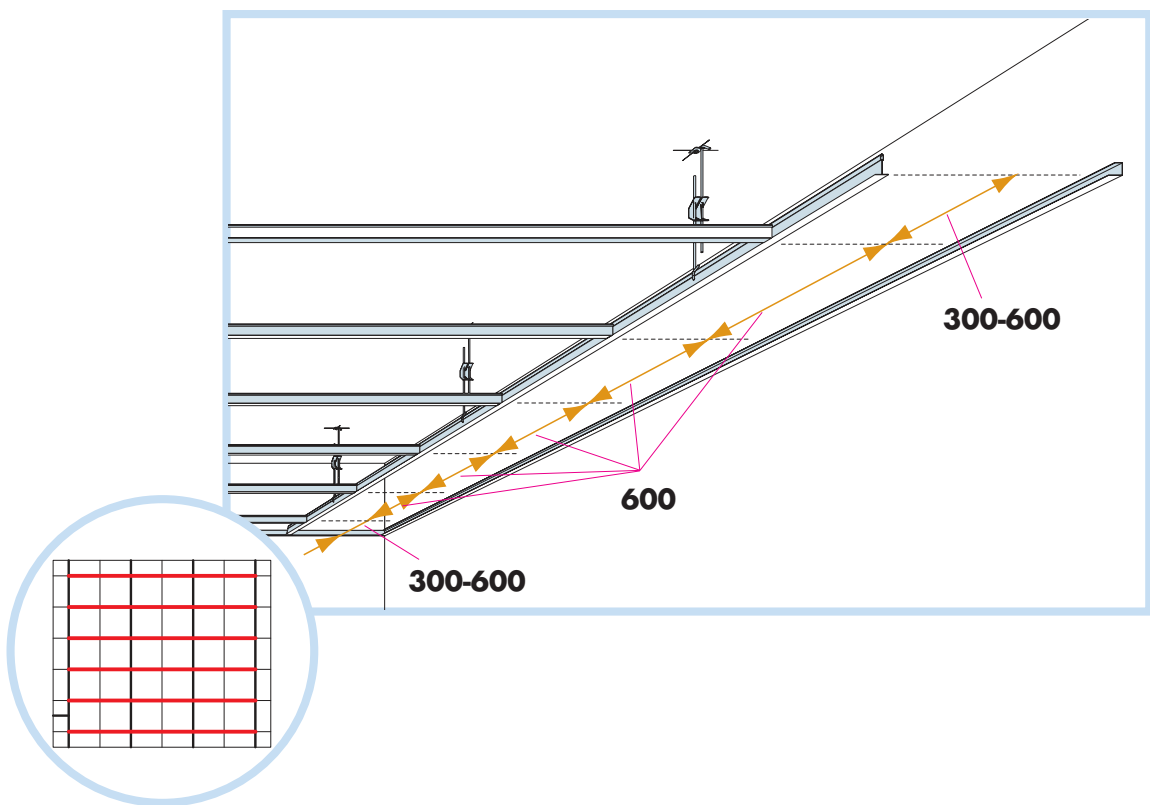
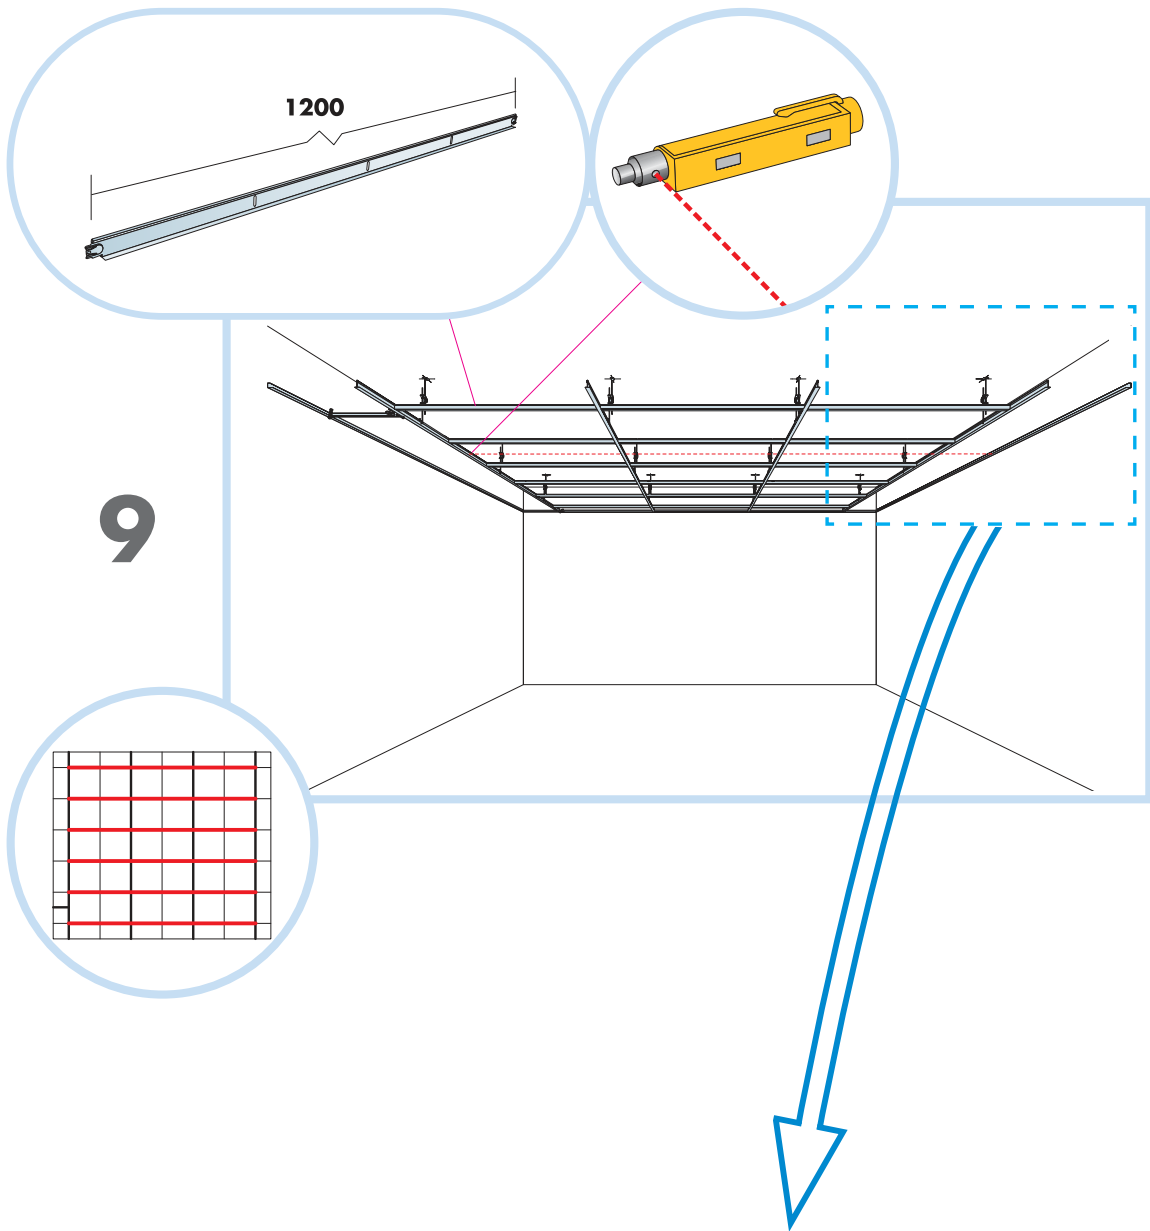


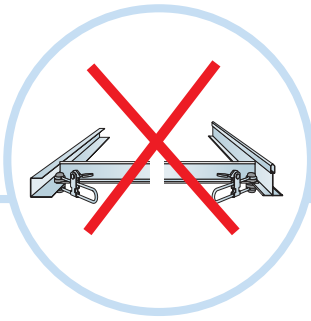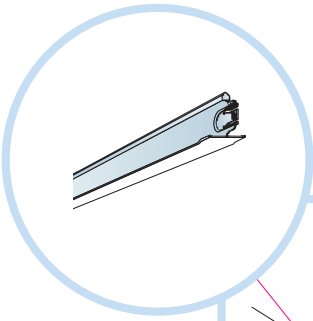

10

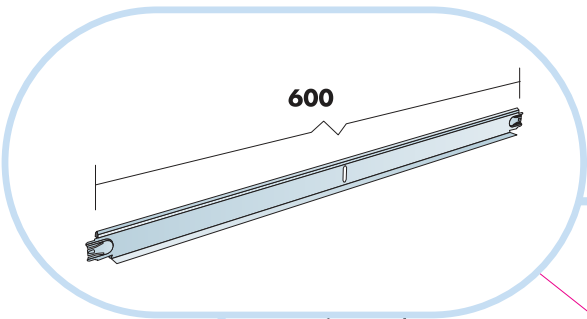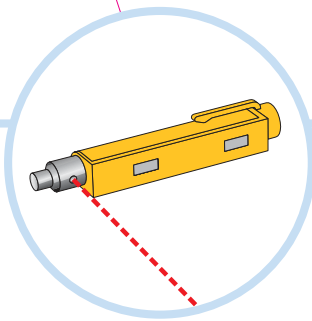
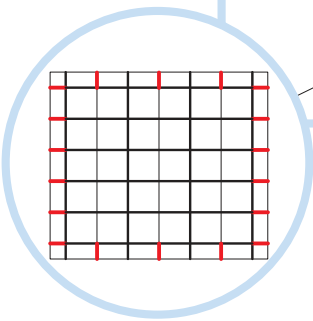
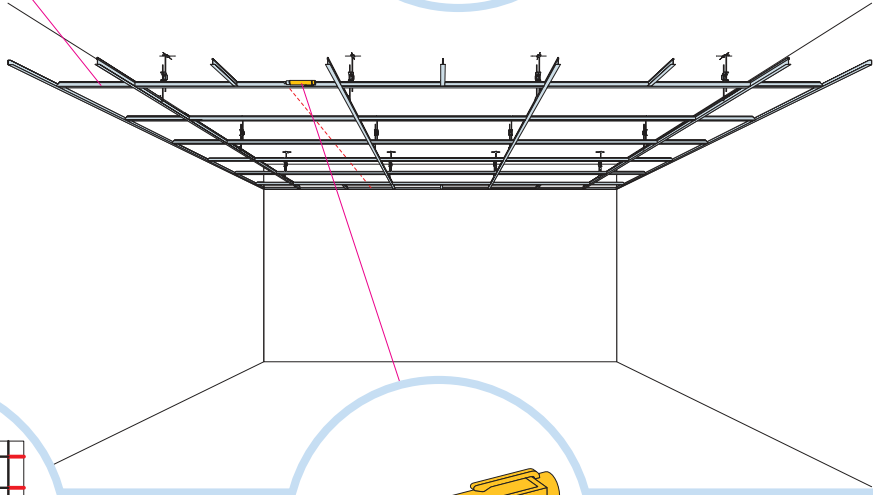


11

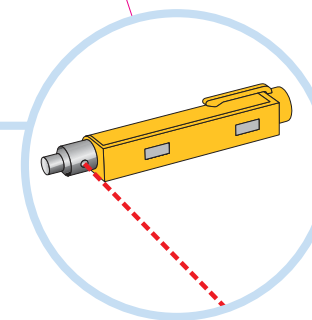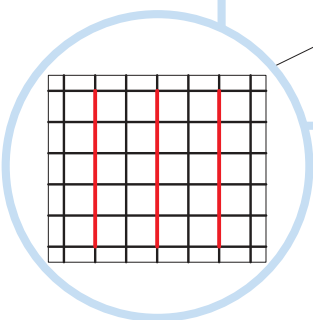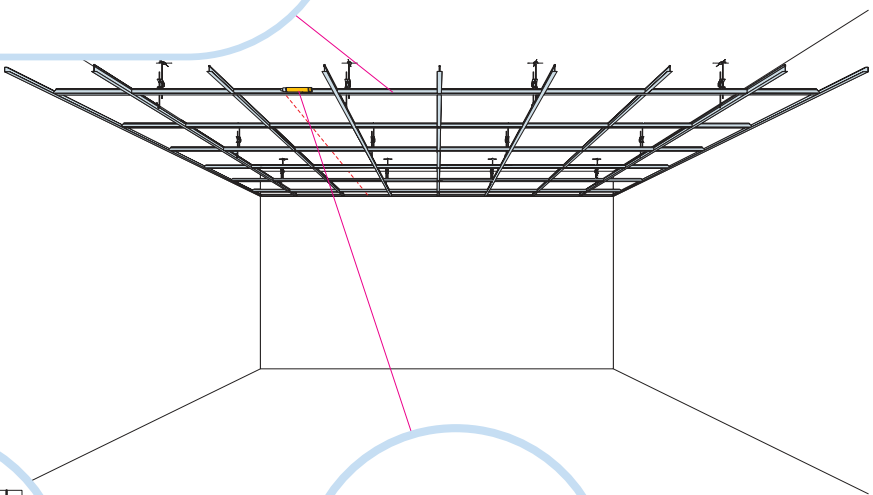







<b>600x600 20 mm</b>	<b>1→</b>	<b>20</b>
<b>600x600 40 mm</b>	<b>1→</b>	<b>40</b>
<b>1200x600 20 mm</b>	<b>2→</b>	<b>20</b>
<b>1200x600 40 mm</b>	<b>2→</b>	<b>40</b>

A-A

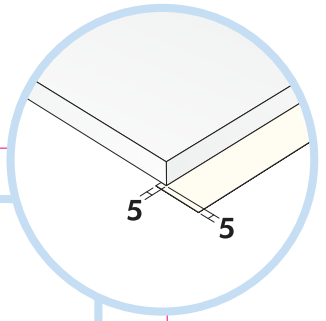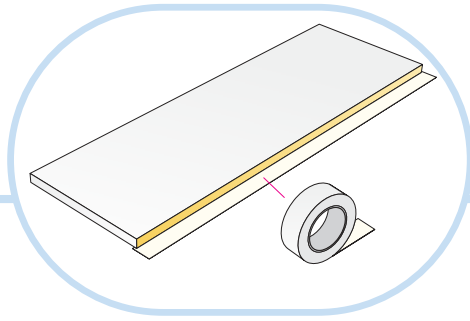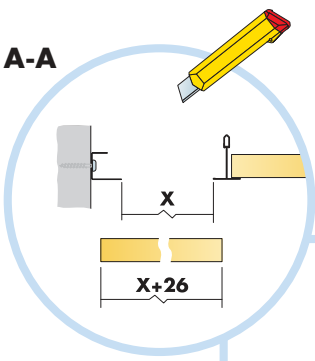

12




20

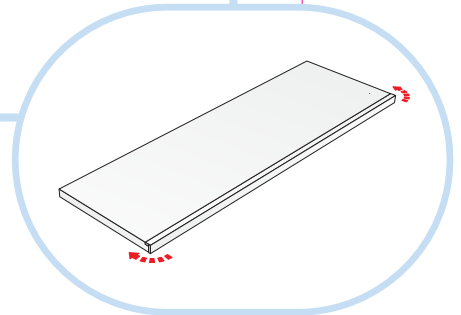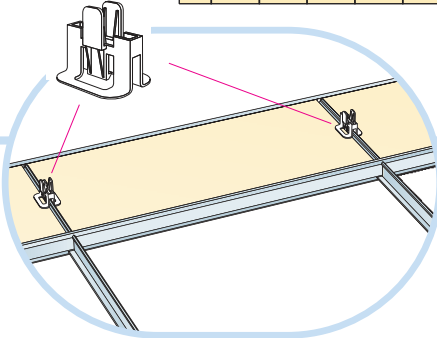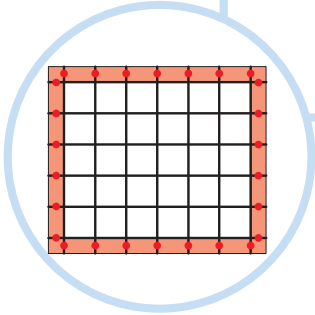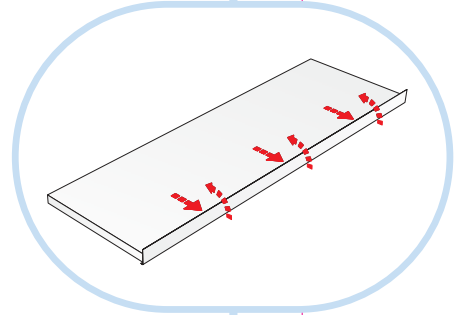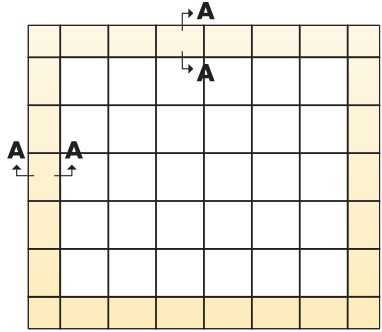


Hygiene Advance technical tile

13








20

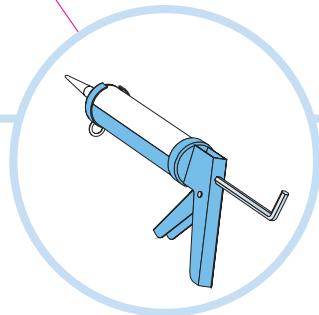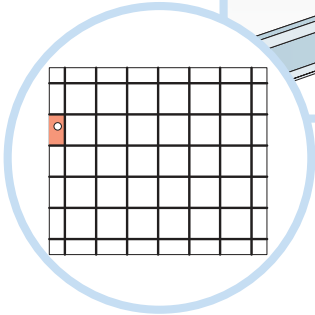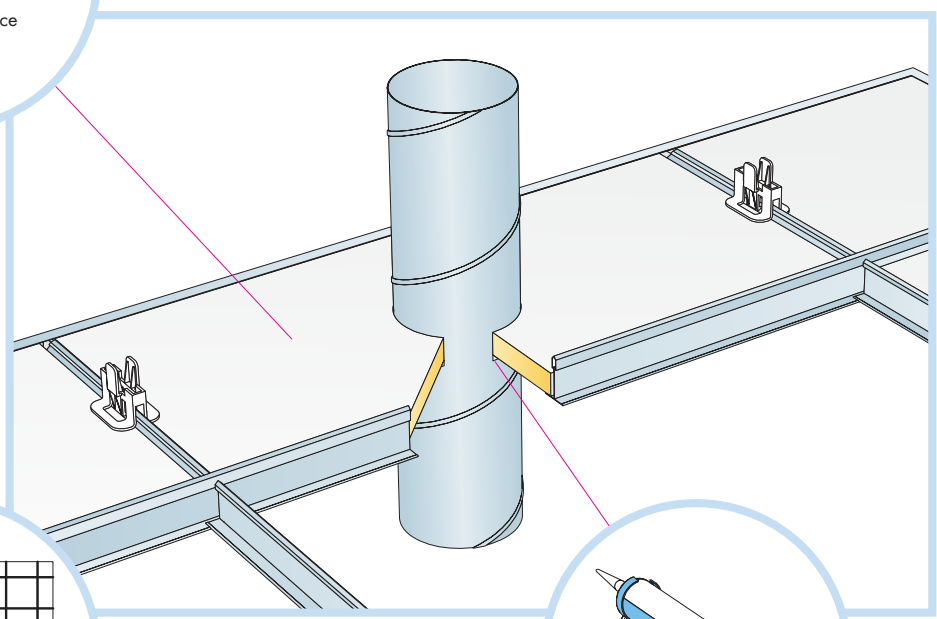

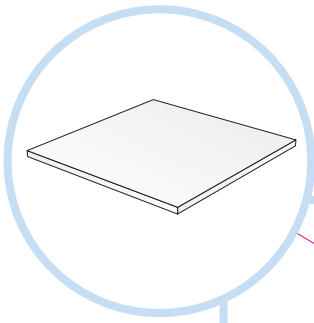





14

20

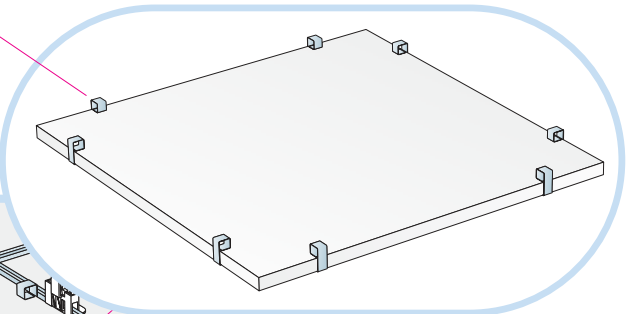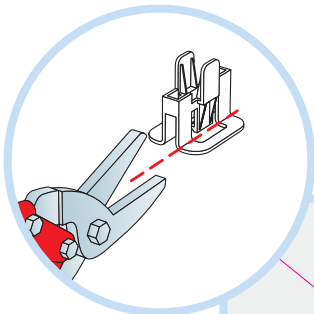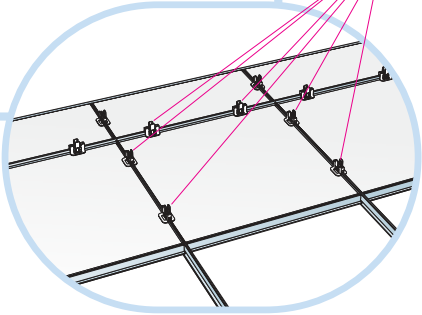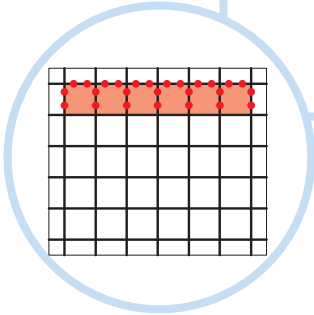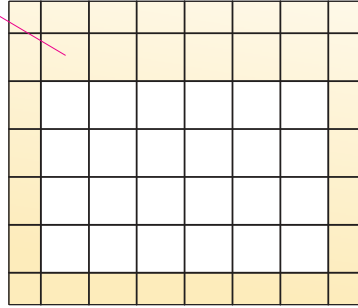

15

20

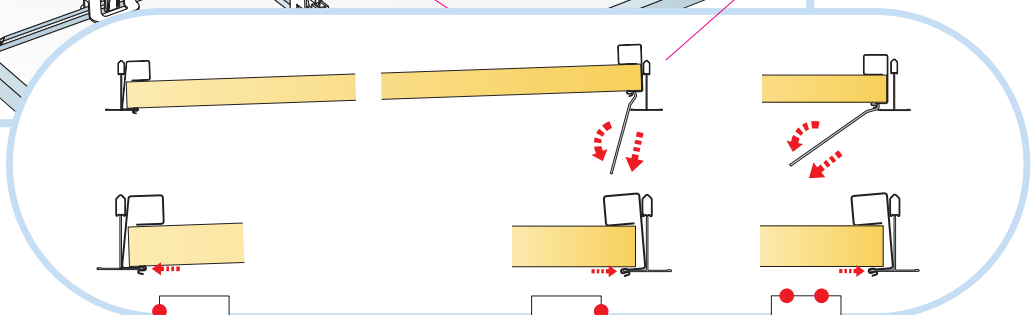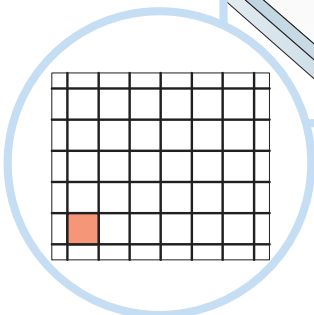
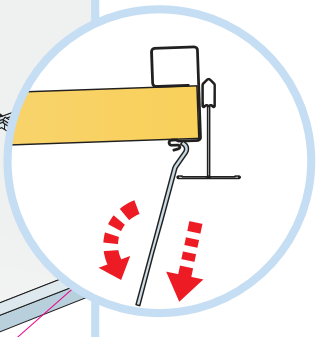
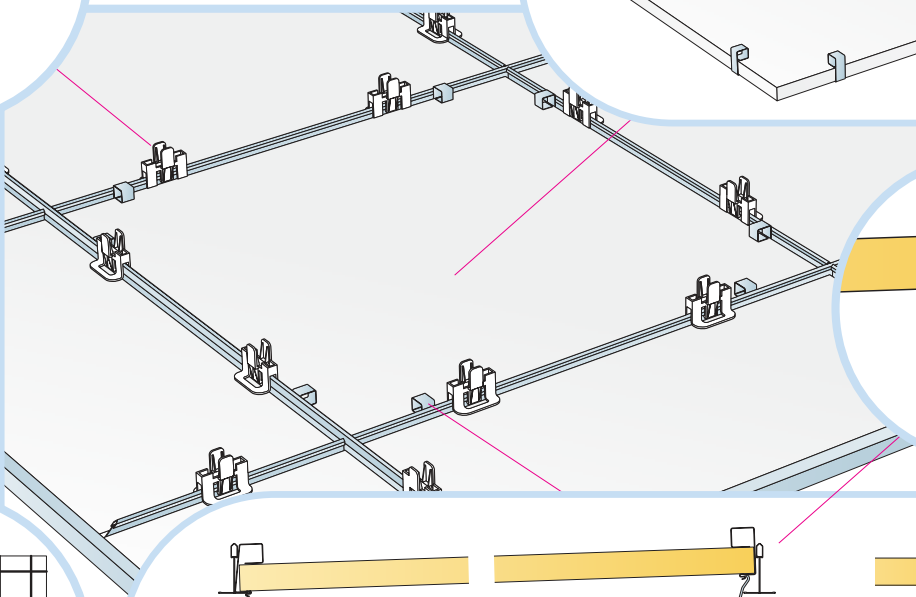


1

2







3

A-A

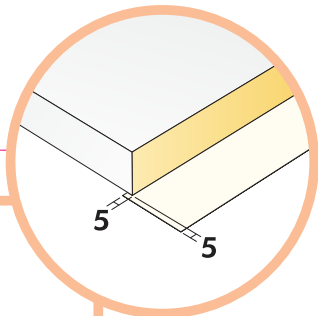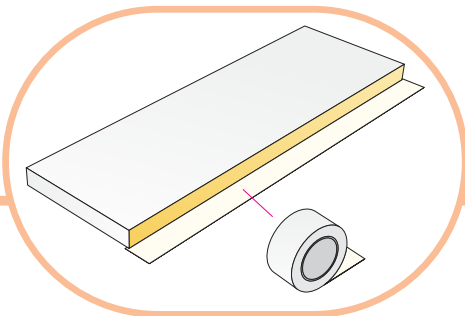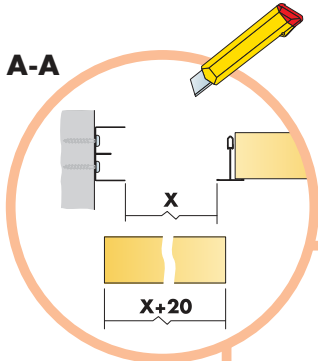

16





40

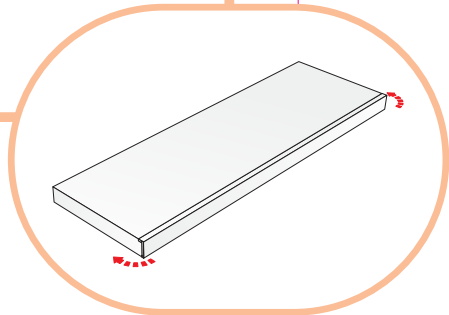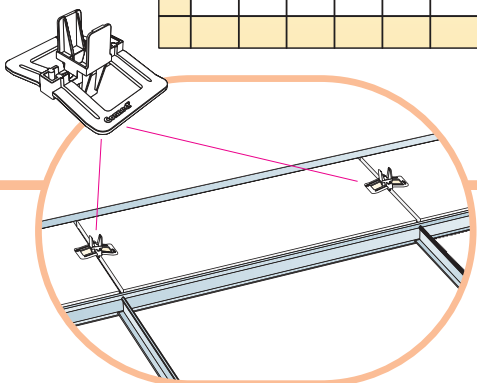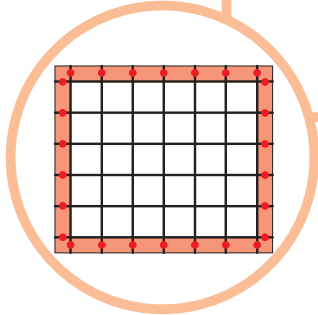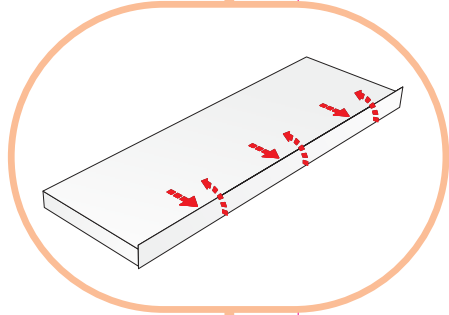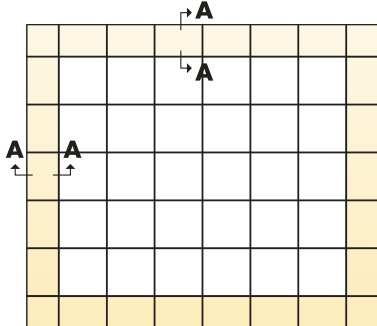


Hygiene Advance technical tile

17







40

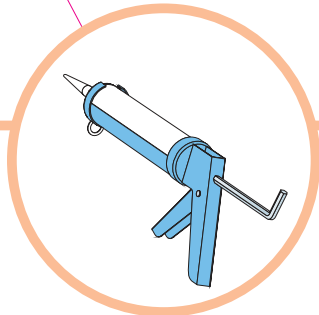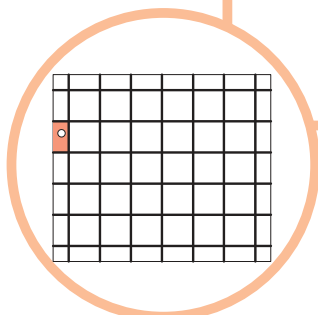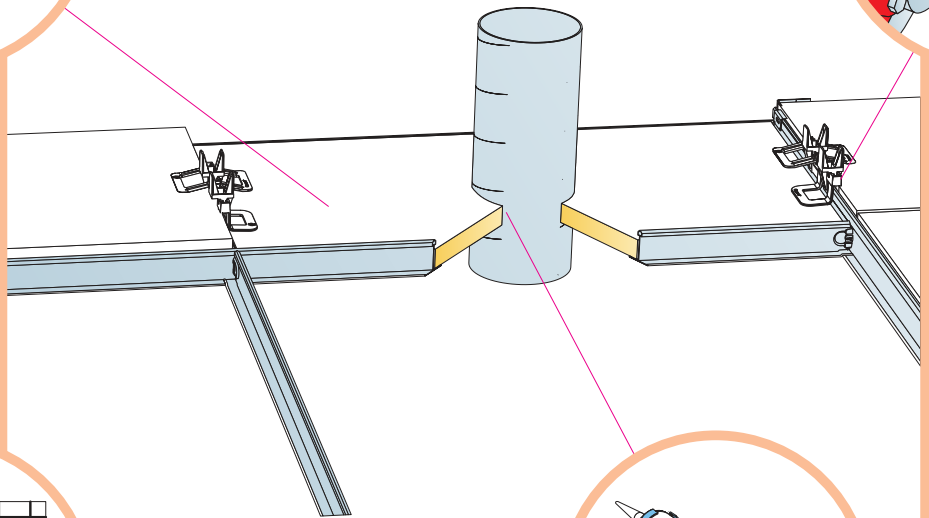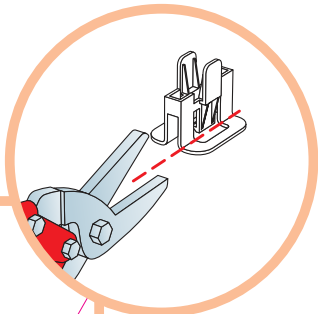

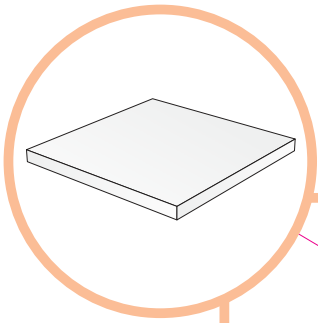





18

40

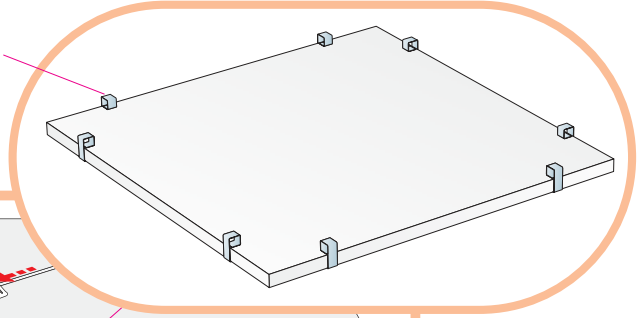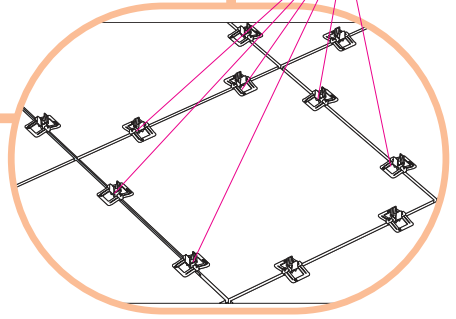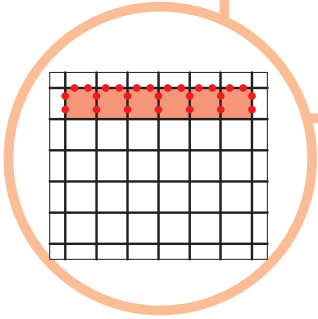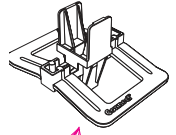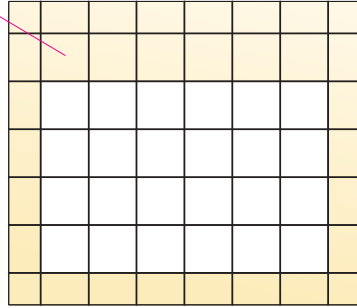

19

40

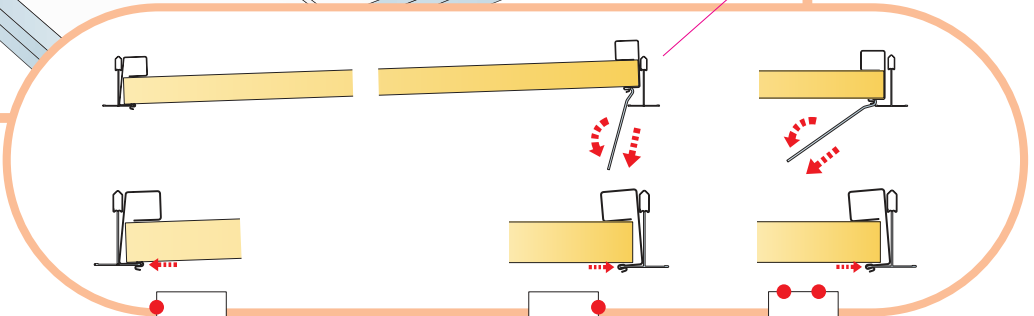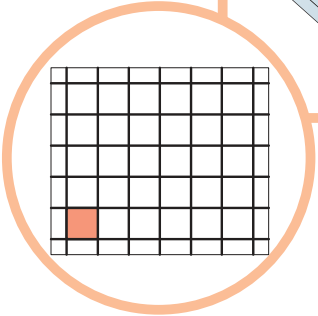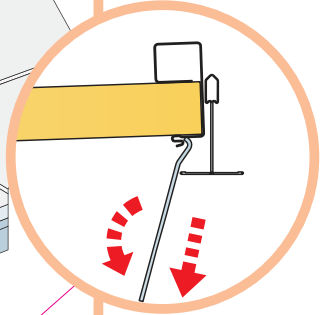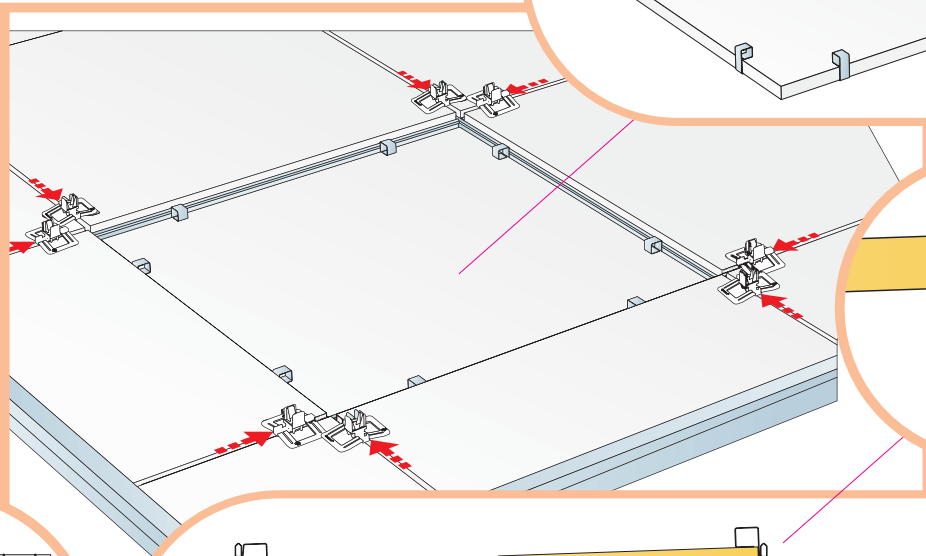




1

2

3




# 20


20

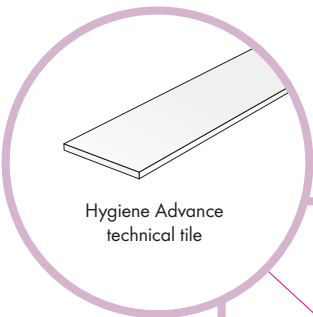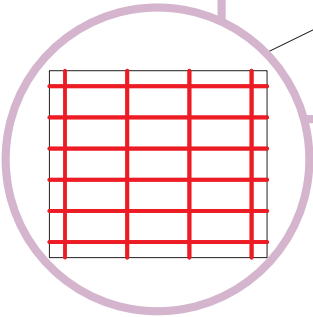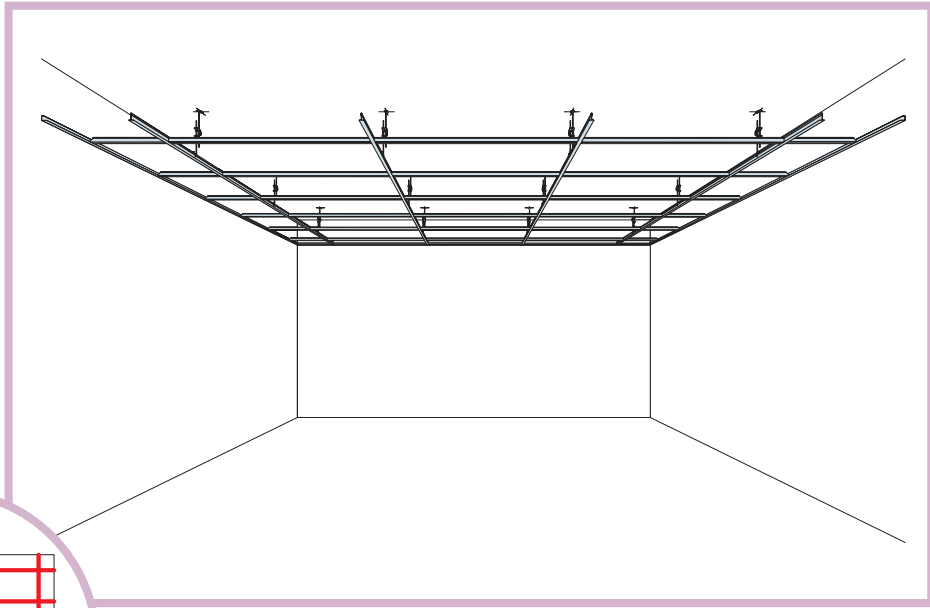

# 21






20

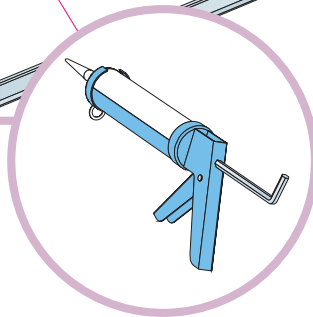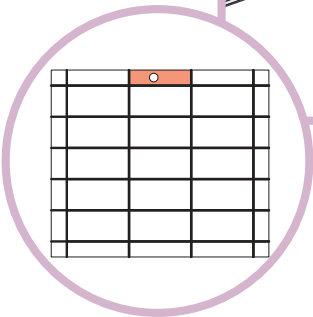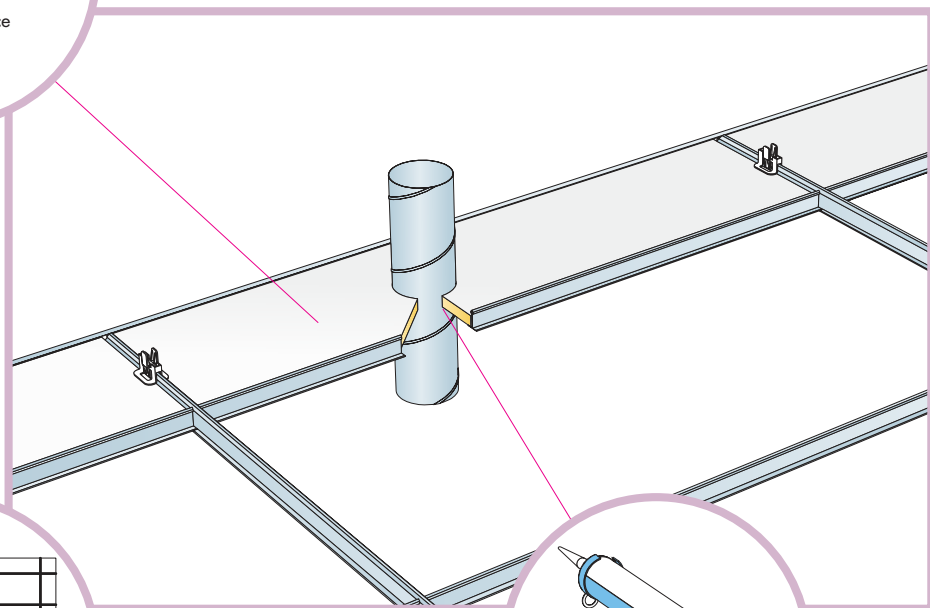







22

20

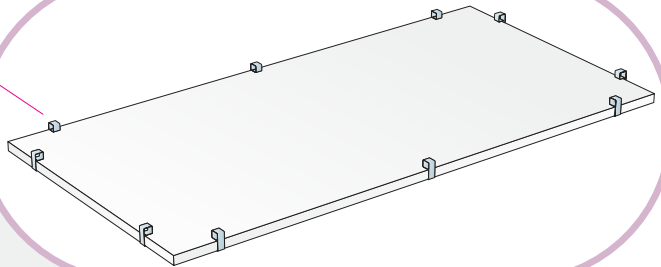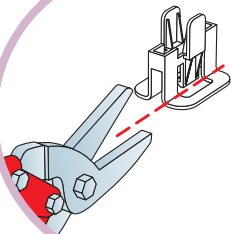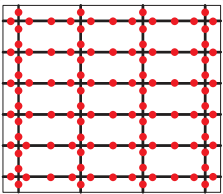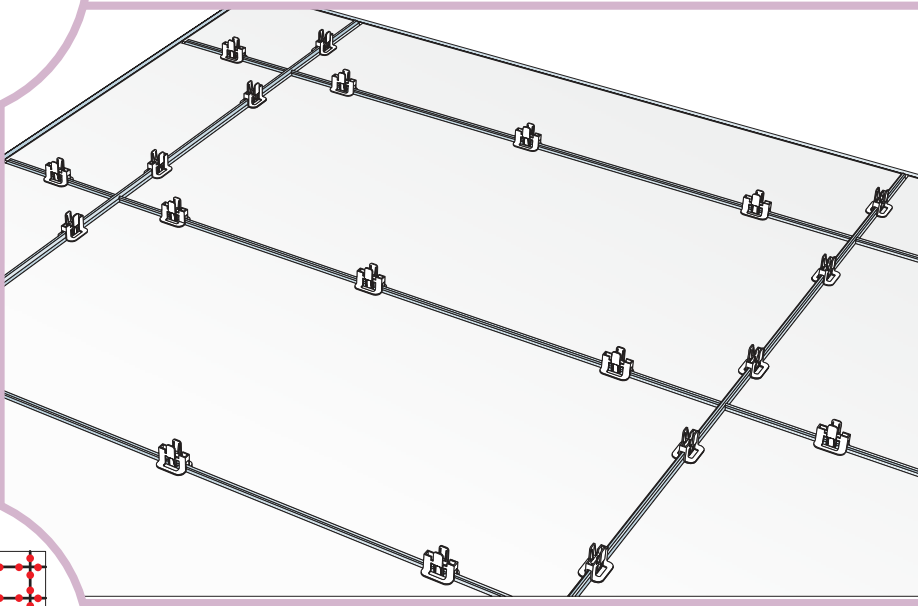

23


20

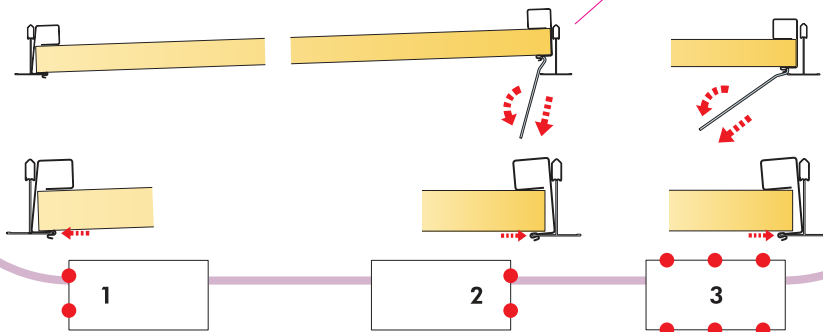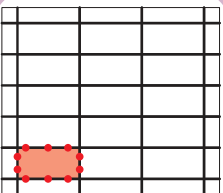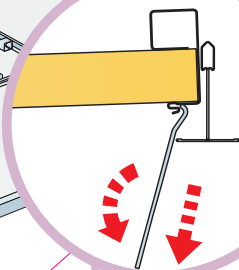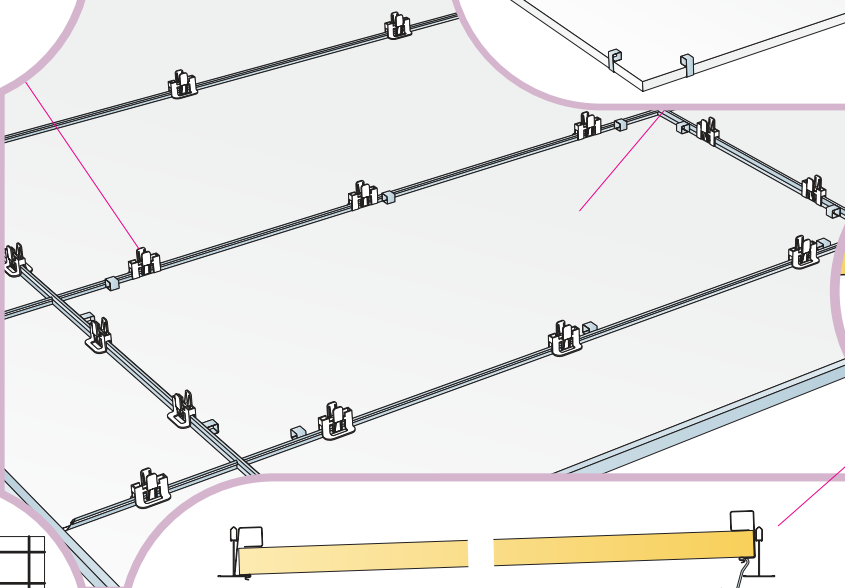

1




2

3

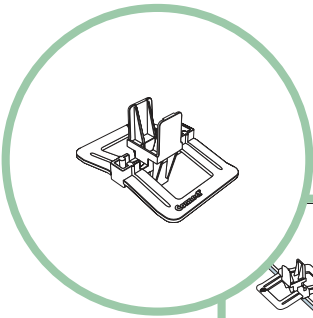

**24**





**40**

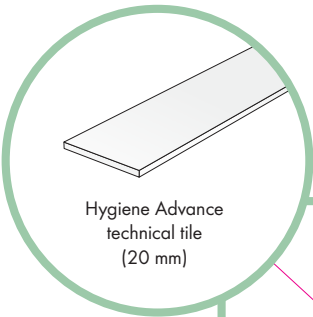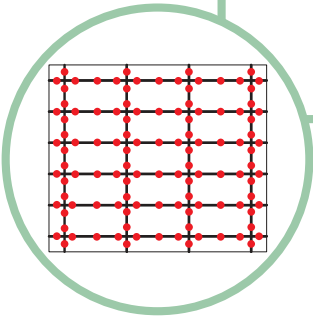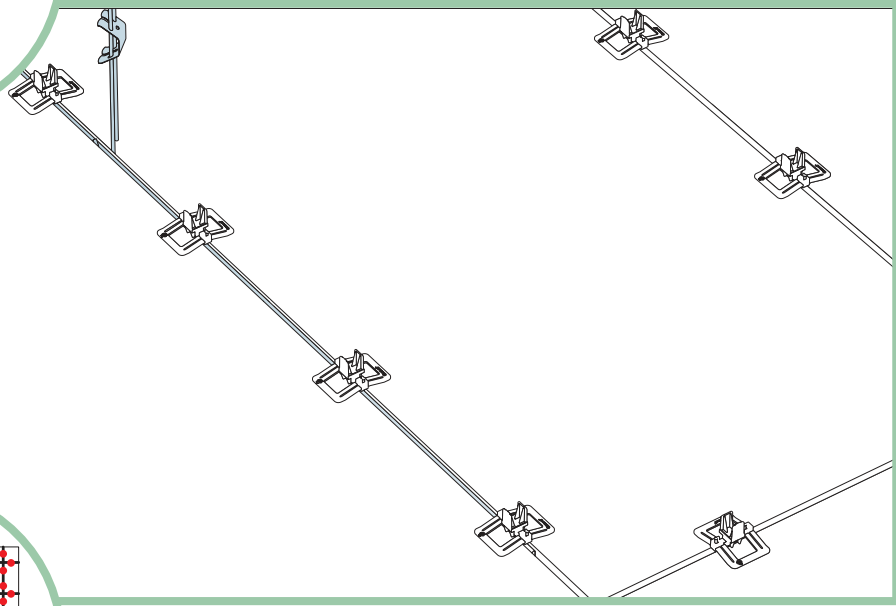


Hygiene Advance  
technical tile  
(20 mm)

**25**

**40**

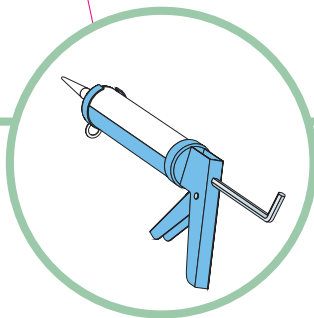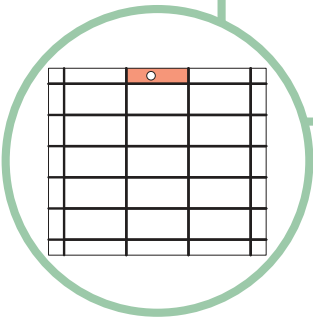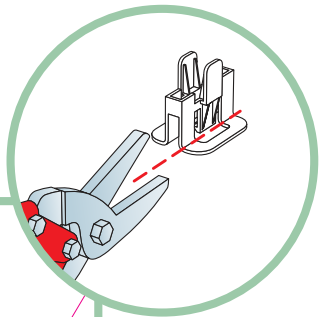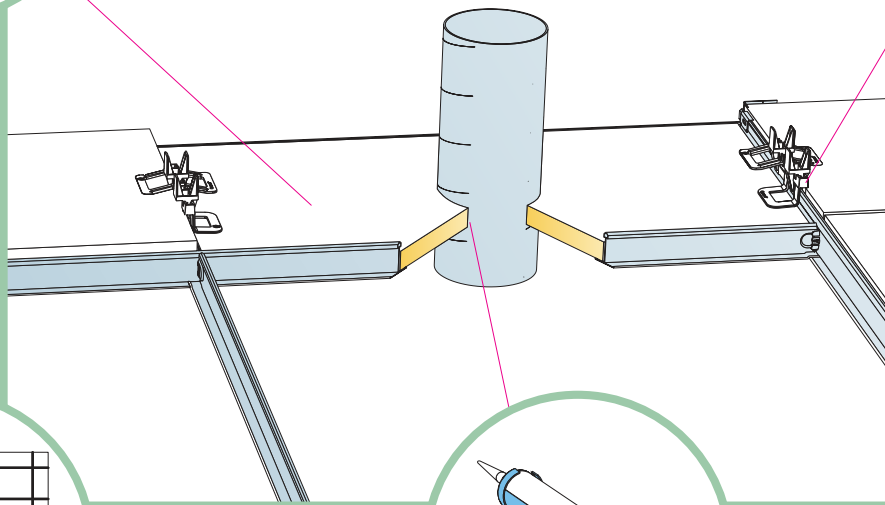

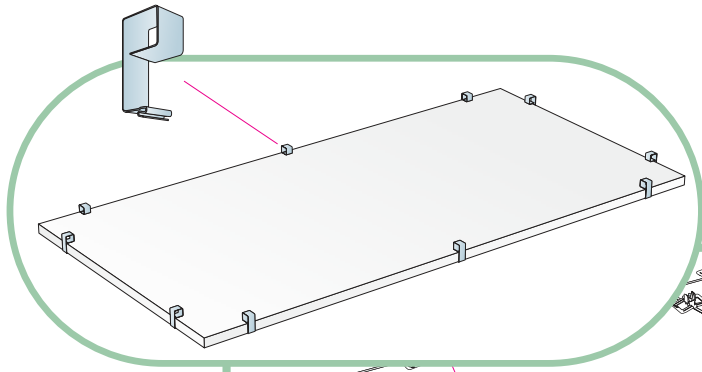

26

40

